



Ref #	Part Number	Qty	Description
1	092387		Seat
2	056516E700		Hinge, Seat
3	028X64		Retainer
4	018X16		Lockwasher
5	001X45		Bolt, Hex
6	091963		Plate, Seat Switch
7	164X26		Spring, Compression
8	091822		Glide, Seat Spring
9	009X38		Bolt, Shoulder
10	091964		Spring, Seat
11	015X88		Locknut, Flange
12	056518E700		Bracket, Seat Pivot
13	028X23		Cap, Push On
14	056537 Z		Rod, Seat Hinge
15	056517E700		Support, Seat
16	26X249		Screw
17	002X53		Bolt, Carriage
18	055017E700		Support, Body Also included with Key No. 21.
19	26X214		Screw
20	056598		Throttle Control
21	056648E726		Body
22	26X201		Screw
23	056570E726		Console Assembly
24	26X254		Screw
25	056022		Bearing, Steering Post
26	055023E726		Console, Plate
27	004X24		Screw
28	028X18		J-Nut
29	056241 Z		Reflector
30	090082		Lens
31	015X66		Locknut
32	054800 Z		Clamp, Battery
33	026X49		Screw
34	017X38		Washer
35	021268		Grommet
37	092637		Mat, Left
38	056611E726		Frame Assembly
39	092636		Mat, Right
40	006X74		Screw
41	056646		Choke
42	0019X8		Washer
43	015X33		Nut
49	0019X6		Washer
50			Engine Parts are available from an Authorized Engine Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.
51	0025X7		Bolt, Engine Mount
	F-99600		Owner's Manual
	44X7626		Decal, Right Panel
	44X7627		Decal, Left Panel
	44X4401		Decal, Shift
	44X6727		Decal, Front
	44X6554		Decal, Clutch/Brake

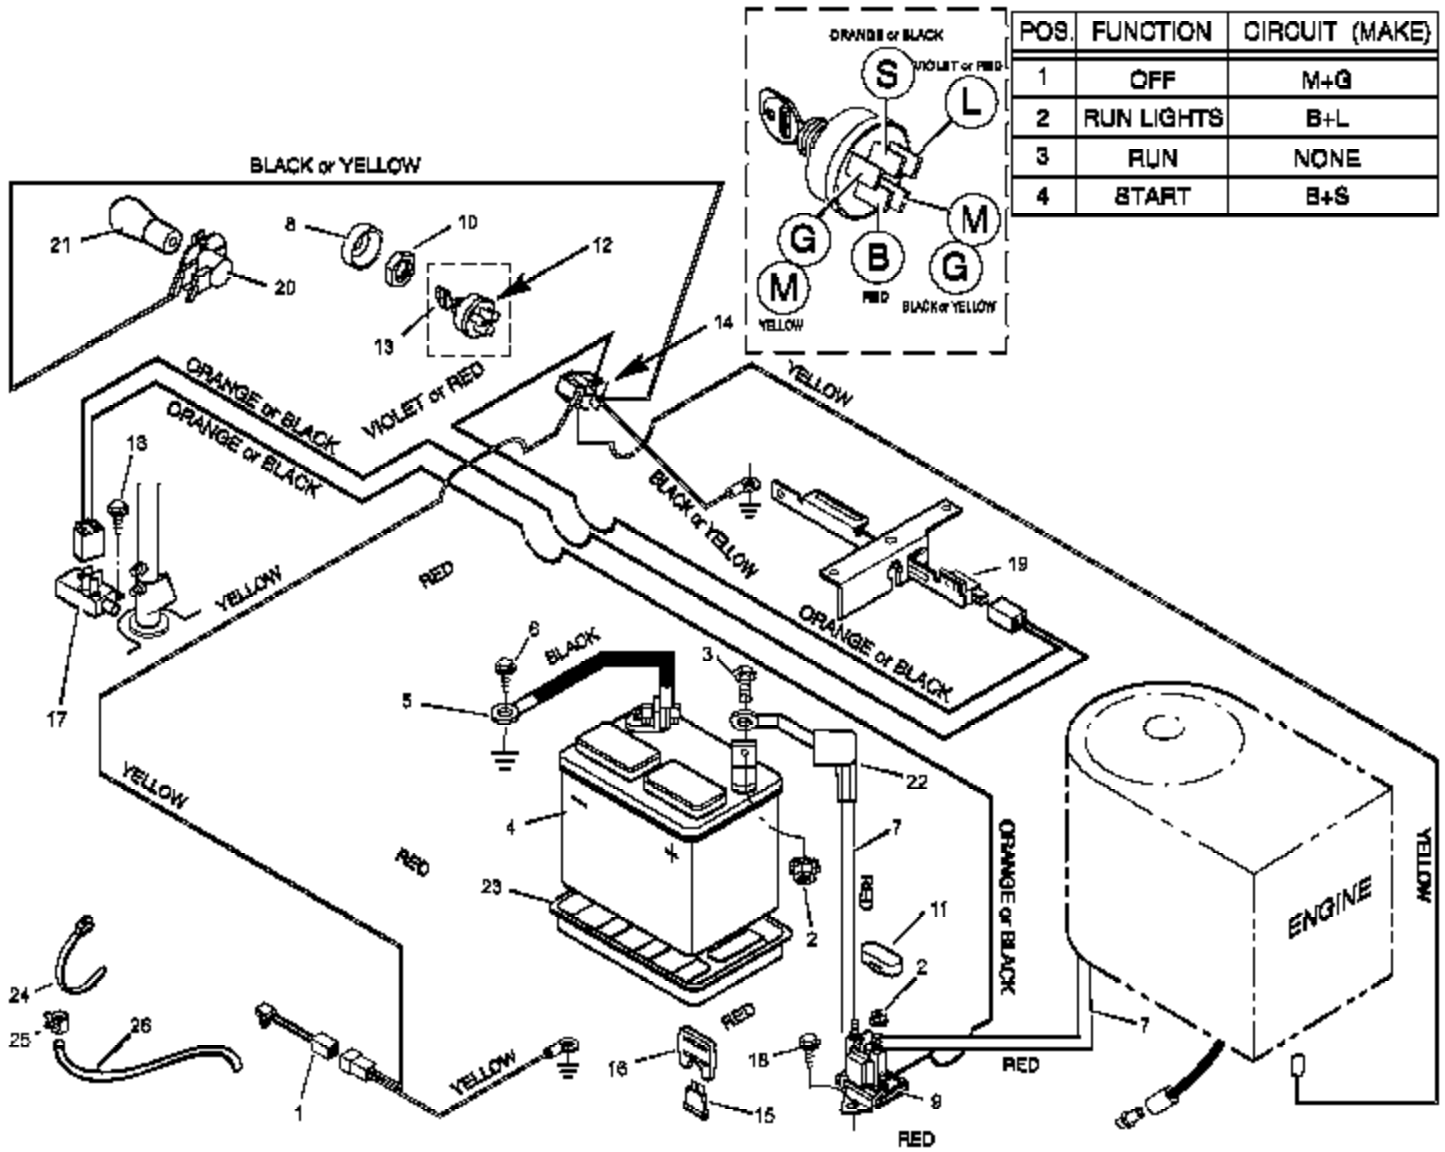


Ref #	Part Number	Qty	Description
1	091031		Switch, Seat Sensor
2	015X66		Locknut
3	001X38		Bolt
4	091414		Battery
5	0024X3		Cable, Battery Ground
6	026X49		Screw
7	024X24		Cable, Red Battery
8	091488		Cap, Ignition
9	094613		Solenoid
10	091489		Nut, Hex
11	056049		Cover, Solenoid (Optional)
12	091846		Switch, Ignition
13	020729		Key, Ignition
14	250X85		Harness, Chassis Wire
15	054212		Fuse
16	407078		Holder, Fuse
17	091032		Switch, Limit
18	26X233		Screw
19	024273		Switch, Limit
20	092372		Socket, Light
21	090084		Bulb, Light
22	054148		Cover, Terminal
23	091896		Tray, Battery
24	032618		Tie
25	091565		Clamp
26	091584		Tube, Drain

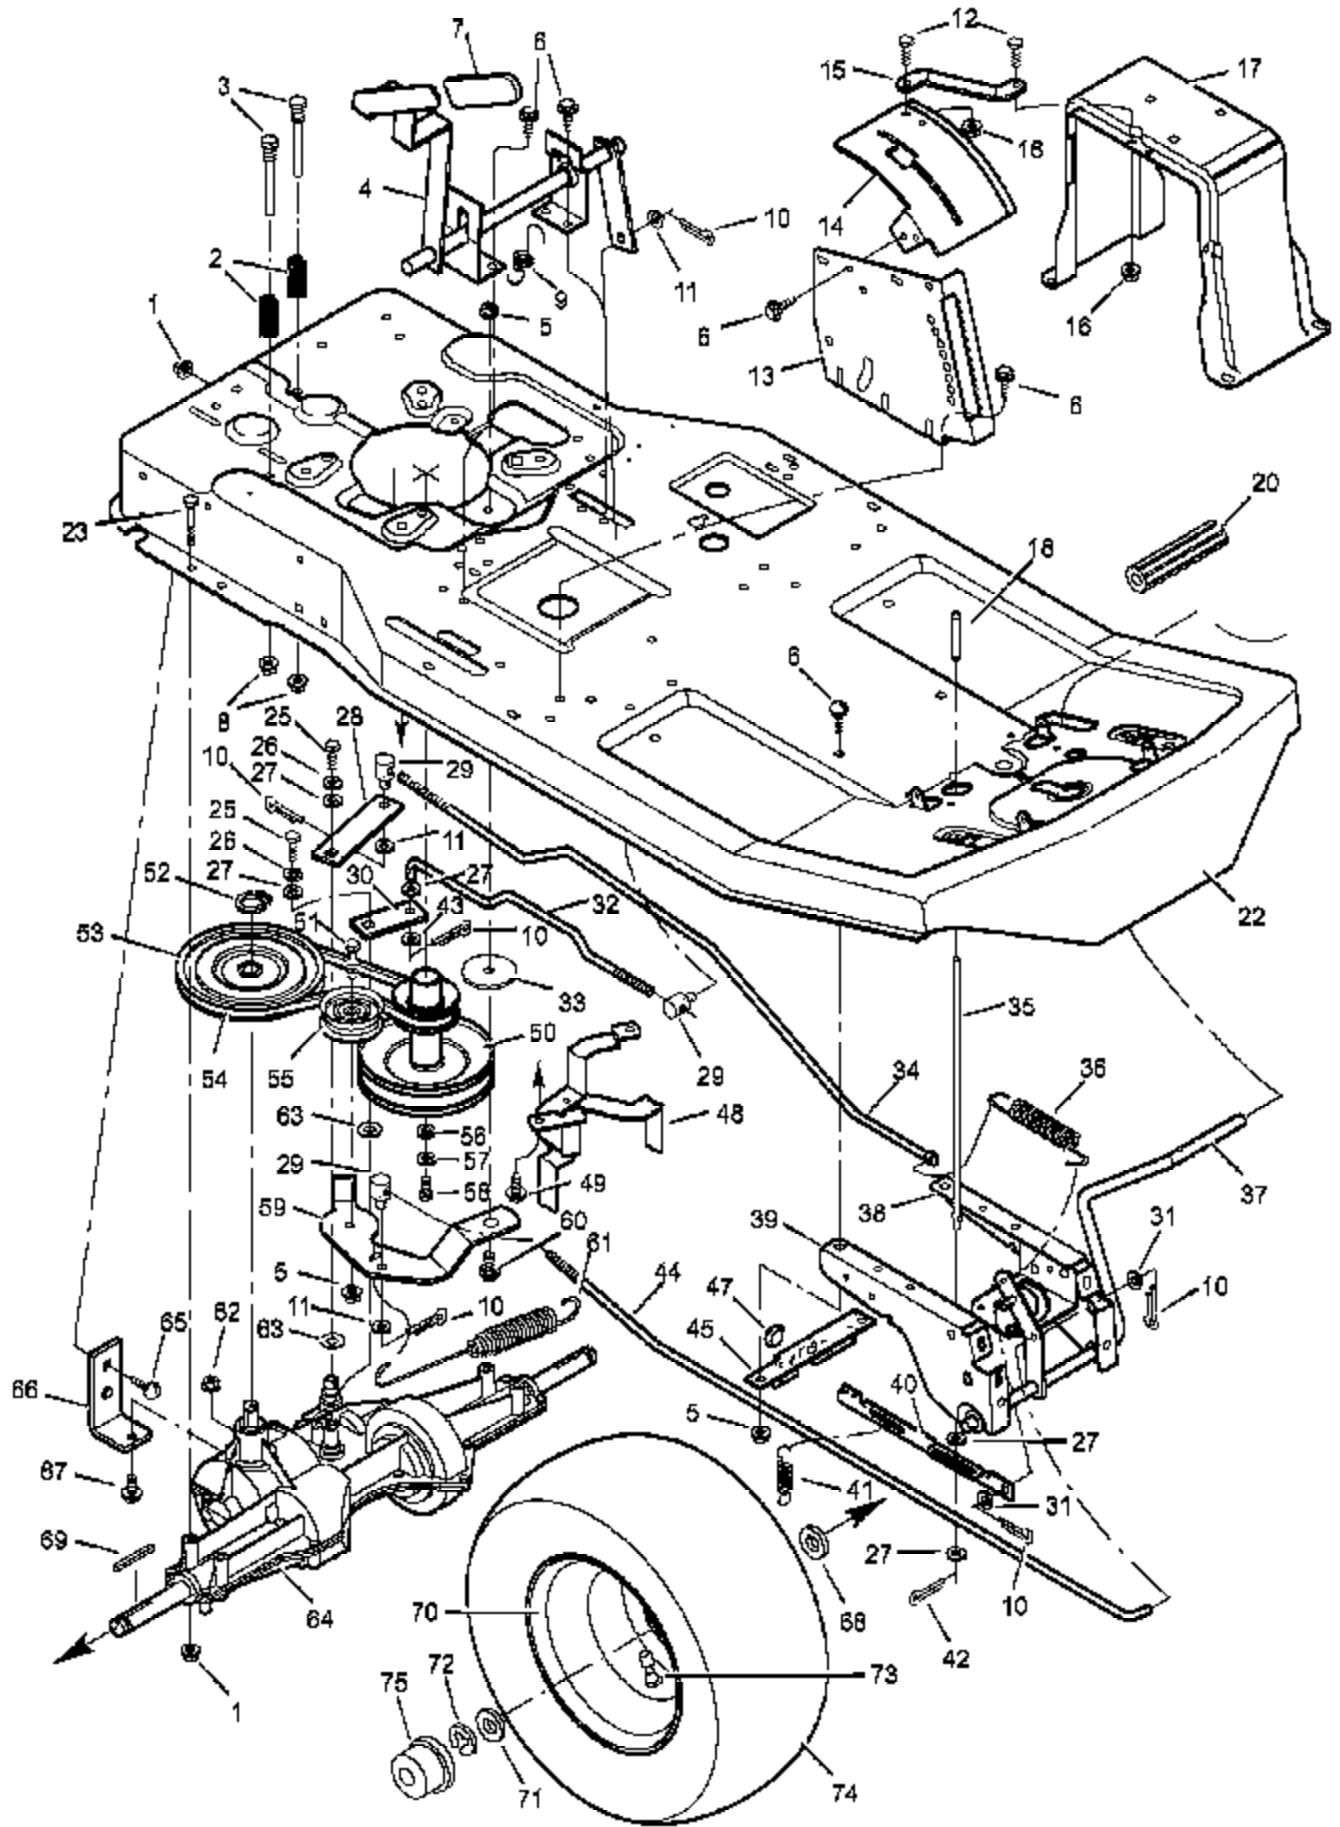


Ref #	Part Number	Qty	Description
1	015X88		Locknut, Flange
2	0164X1		Spring, Compression
3	055826		Guide, Belt
4	56610E700		Shifter Assembly
5	015X84		Locknut, Flange
6	26X267		Screw
7	091573		Grip, Shift Lever
8	15X115		Hex Nut
9	165X100		Spring, Extension
10	030X20		Pin, Cotter
11	017X53		Washer
12	001X38		Bolt, Hex
13	056595E700		Plate, Index
14	056606E700		Gate, Shift
15	056529E700		Brace, Shift Gate
16	015X89		Locknut, Flange
17	056517E700		Support, Seat
18	055873		Grip, Parking Brake
20	055825		Pedal, Rubber
22	056611E726		Frame Assembly
23	01X124		Bolt, Hex
25	01X145		Bolt, Hex
26	018X32		Lockwasher
27	017X36		Washer
28	056500 Z		Yoke, Brake
29	021920		Nut, Adjusting
30	056505 Z		Yoke, Shift
31	017X47		Washer
32	056591 Z		Rod, Shift
33	17X174		Washer, Hardened
34	056530 Z		Rod, Brake
35	056566 Z		Rod, Parking Brake
36	165X85		Spring, Extension
37	056511E700		Lever, Pedal
38	56224E700		Plate, Left Suspension
39	056023E700		Plate, Right Suspension
40	056565 Z		Link, Parking Brake
41	165X107		Spring, Extension
42	030X50		Pin, Cotter
43	017X46 Z		Washer
44	056531 Z		Rod, Clutch
45	56227E700		Stop, Parking Brake
47	056623		Grommet
48	056215 Z		Guide, Belt
49	026X49		Screw
50	092247SE		Pulley Assembly, Stack
51	01X111		Bolt, Hex
52	0011X7		Ring, Retainer
53	056562		Pulley, Drive
54	037X65		Belt, Motion Drive
55	056526		Pulley, Idler
56	17X170		Washer
57	019X35		Lockwasher
58	01X140		Bolt, Hex
59	1001034E700		Bracket, Idler
60	009X42		Bolt, Shoulder
61	165X81		Spring, Extension
62	015X43		Locknut, Hex


Ref #	Part Number	Qty	Description
63	17X148		Washer
64			Transaxle, Dana Model 4450-1 Parts are available from a Authorized Engine Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory
65	002X53		Bolt, Carriage
66	056503 Z		Bracket, Transaxle
67	01X139		Bolt, Hex
68	17X160		Washer
69	056534		Key, Square
70	92308-601		Wheel & Tire Assembly
71	17X195		Washer
72	0011X3		E-Ring
73	024373		Valve Stem Also included with Key No. 70.
74	024393		Tire Only Also included with Key No. 70.
75	094618		Hub Cap Optional

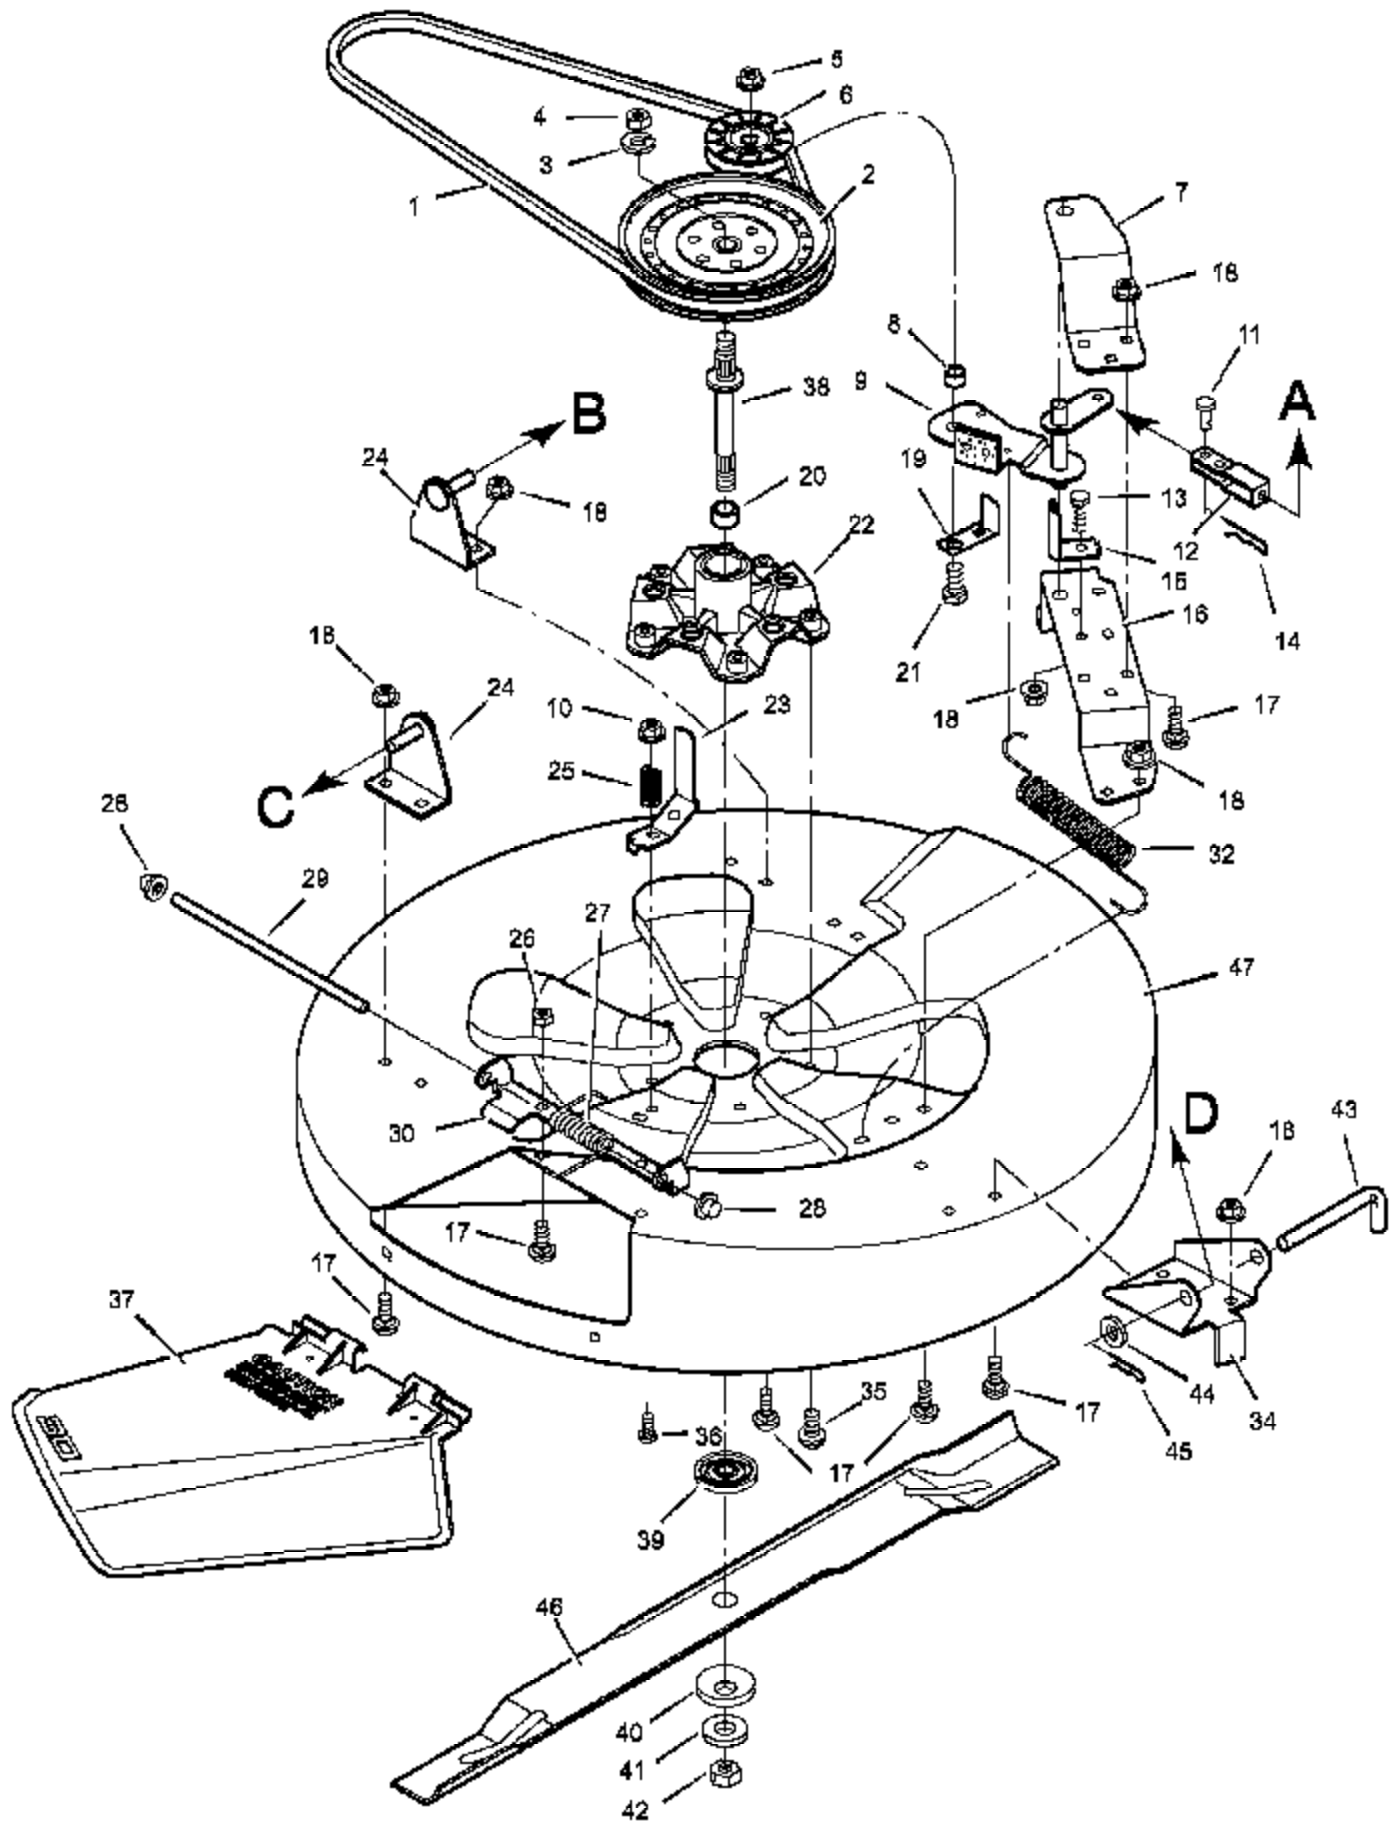

Ref #	Part Number	Qty	Description
1	037X57		Belt, Mower Drive
2	091951		Pulley, Splined
3	018X33		Lockwasher
4	15X100		Locknut, Hex
5	015X41		Nut, Hex
6	091178		Pulley, Idler
7	055921		Bracket, Upper Idler
8	055895		Spacer
9	055979		Assembly, Blade Idler
10	015X88		Locknut, Flange
11	029X99		Pin, Clevis
12	024471 Z		Clevis
13	001X45		Bolt, Hex
14	0031X6		Pin, Hair
15	055977		Guide, Belt
16	55920E700		Bracket, Lower Idler
17	002X53		Bolt, Carriage
18	015X79		Nut, Flange
19	055894		Guide, Belt
20	091925		Spacer
21	01X127		Bolt, Hex
22	055962		Housing, Mandrel
23	055956 Z		Guide, Belt
24	055974E700		Bracket, Hanger
25	0164X1		Spring, Compression
26	015X43		Nut, Hex
27	0166X4		Spring, Torsional
28	028X23		Push On Cap
29	021197 Z		Rod
30	56213E700		Hinge, Chute Deflector
32	165X68		Spring, Extension
34	055916E700		Bracket, Front
35	26X216		Screw
36	001X75		Bolt, Hex
37	055971		Deflector, Chute
38	091921		Mandrel
39	092466		Adapter, Blade
40	17X166		Washer, Belleville
41	17X165		Washer, Hardened
42	15X100		Nut, Hex
43	090828 Z		Pin, Pull
44	017X67 Z		Washer
45	0031X4		Pin, Hair
46	56246E700		Blade, Standard
47			UNKNOWN
	403330		Mower Housing, Complete Includes Key No. 1-47

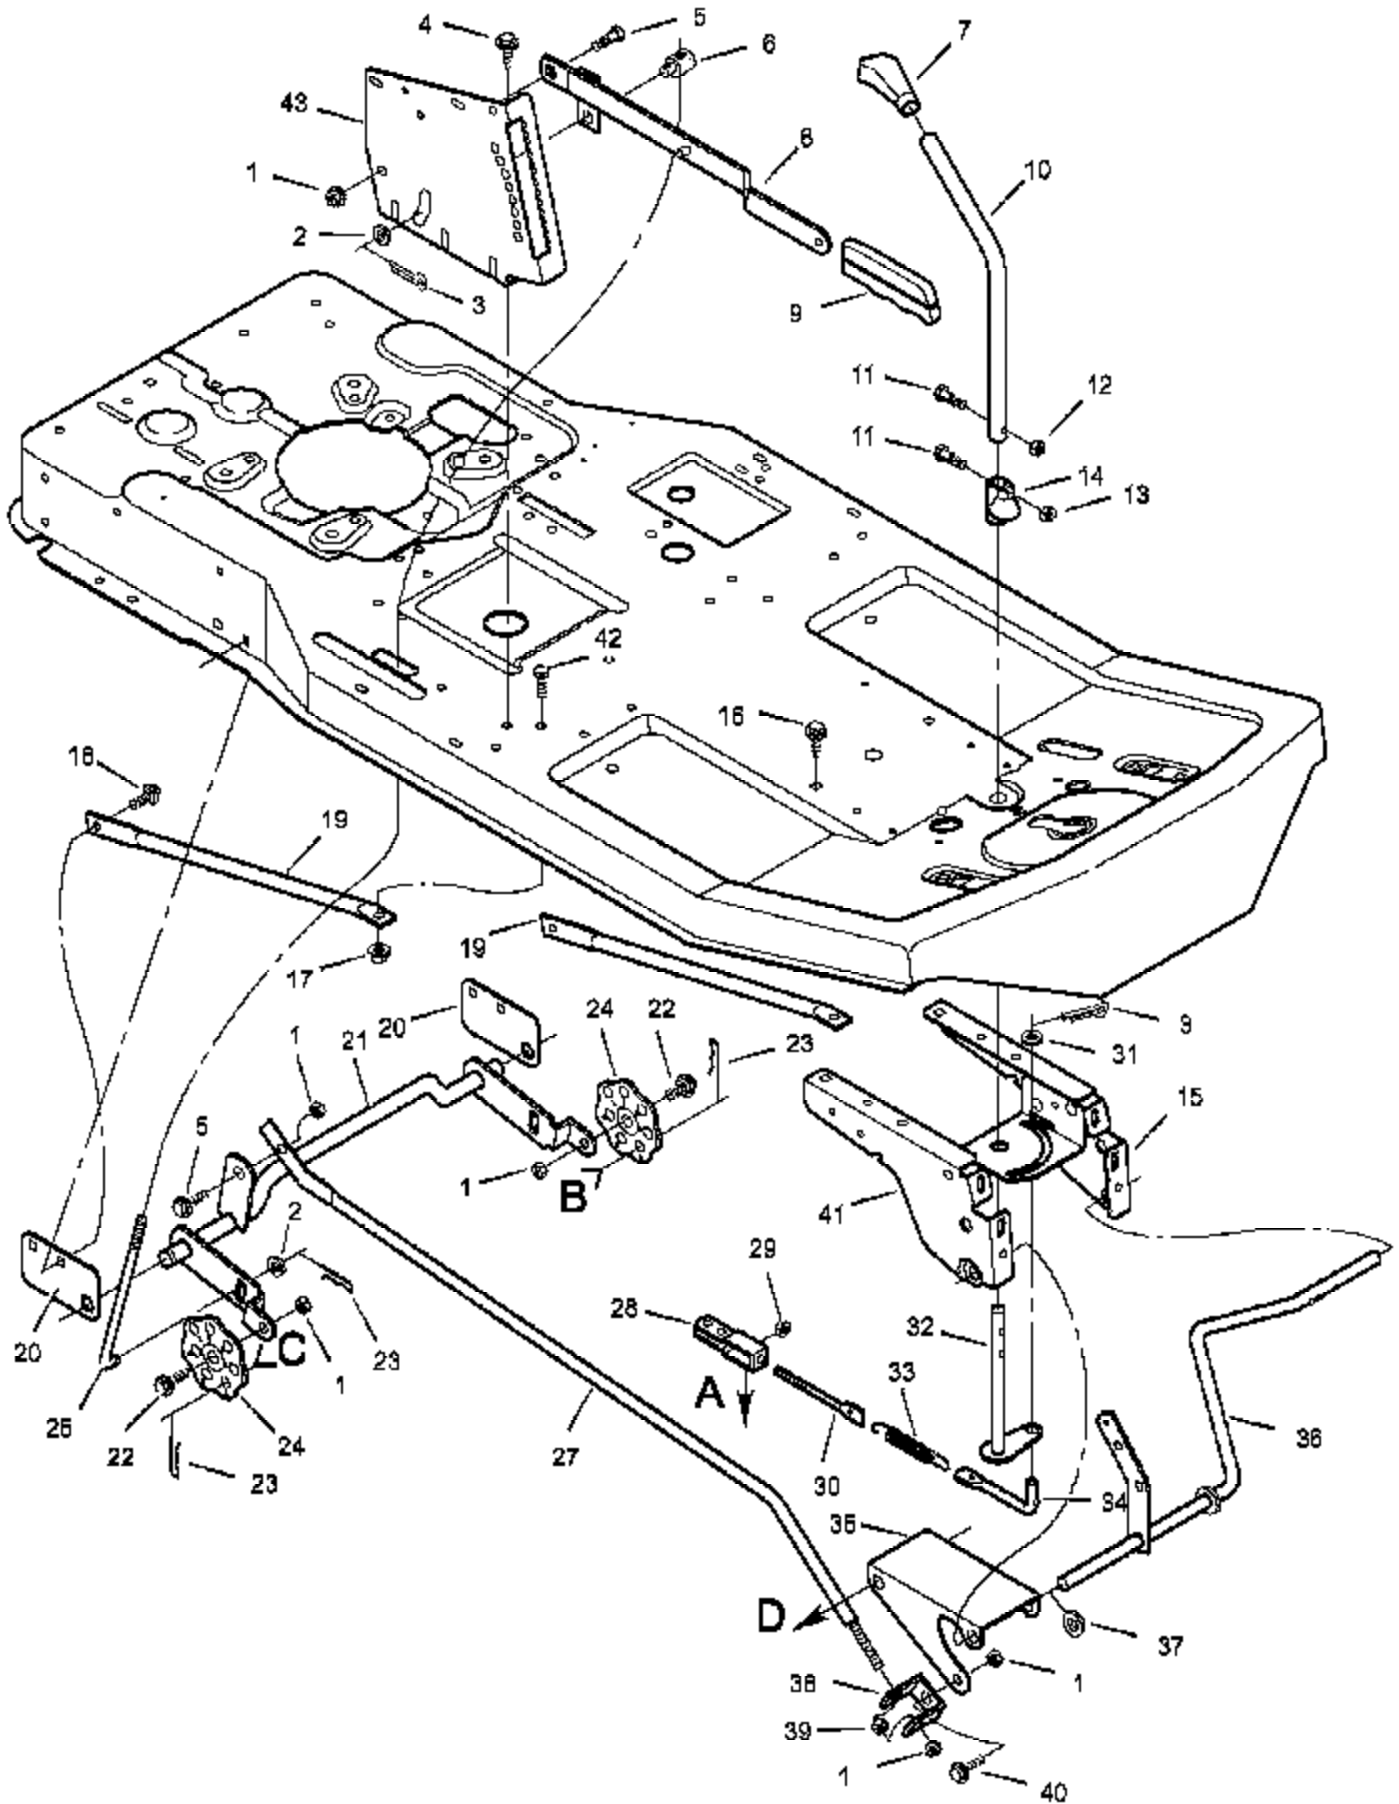

Ref #	Part Number	Qty	Description
1	015X84		Locknut, Flange
2	017X53 Z		Washer
3	030X20		Pin, Cotter
4	26X249		Screw
5	009X39		Bolt, Shoulder
6	021920		Nut, Adjusting
7	092698		Grip, Blade Control
8	056031E700		Lever Assembly, Lift
9	091573		Grip, Lift Lever
10	055927 Z		Attachment, Clutch
11	001X76		Bolt, Hex
12	015X66		Locknut
13	015X89		Locknut, Flange
14	055853		Cam, Blade Control
15	56224E700		Plate, Left Suspension
16	26X249		Screw
17	015X88		Locknut, Flange
18	002X64		Bolt, Carriage
19	055326		Strut, Frame
20	055270E700		Plate, Mounting
21	055346E700		Rod Assembly, Rear Suspension
22	0009X4		Bolt, Shoulder
23	0031X4		Pin, Hair
24	055344 Z		Plate, Adjusting
25	24839E700		Rod, Lifter
27	055957E700		Rod, Suspension
28	024471 Z		Clevis
29	0015X2		Nut, Hex
30	055271 Z		Link, Blade Drive
31	017X48		Washer
32	055930E700		Rod and Arm Assembly
33	165X67		Spring, Extension
34	055179 Z		Link, Front Deck
35	055139E700		Bracket, Front Suspension
36	056511E700		Lever, Pedal
37	17X122 Z		Washer
38	055298		Clevis
39	015X73		Locknut, Hex
40	009X17		Bolt, Shoulder
41	056023E700		Plate, Right Suspension
42	001X45		Bolt, Hex
43	056595E700		Plate, Index

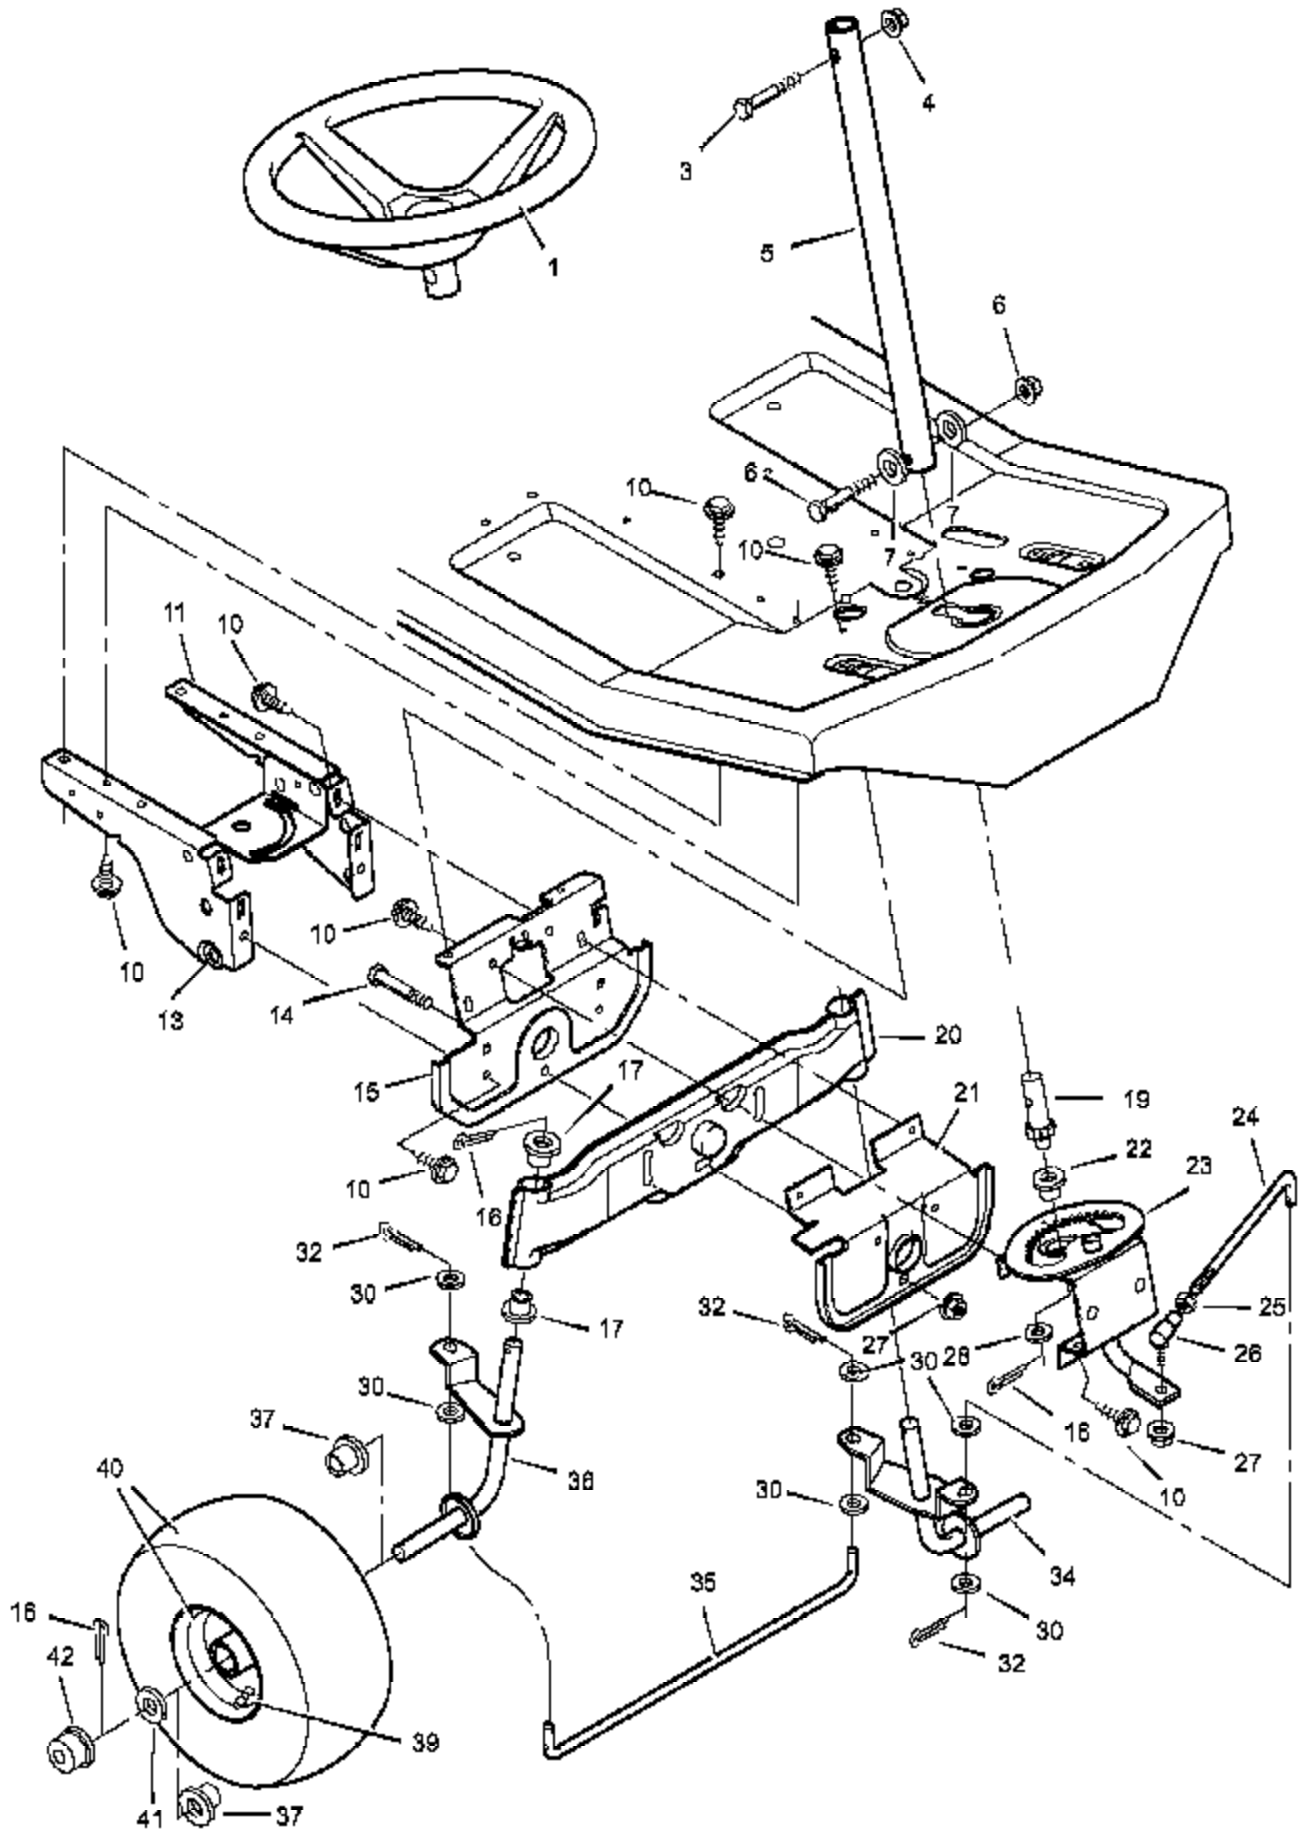

Ref #	Part Number	Qty	Description
1	92076		Steering Wheel
3	01X102		Bolt, Hex
4	015X88		Locknut, Flange
5	91444C		Post, Steering
6	015X88		Nut, Hex
7	017X47		Washer
10	26X267		Screw
11	56224E700		Plate, Left Suspension
13	056023E700		Plate, Right Suspension
14	001X69		Bolt, Hex
15	56231E700		Support, Front Axle
16	030X49		Pin, Cotter
17	055003		Bearing, Spindle
19	056057		Gear, Pinion
20	56223E700		Axle Assembly, Front
21	56230E700		Hanger Assembly, Front Axle
22	055168		Bearing
23	56236E700		Sector Assembly
24	056625 Z		Rod, Drag Link
25	015X61		Nut, Hex
26	021031		Ball Joint, Steering
27	015X87 Z		Locknut, Flange
28	017X87 Z		Washer
30	017X53 Z		Washer
32	030X20		Pin, Cotter
34	400301		Spindle Assembly, Left
35	055026 Z		Rod, Tie
36	400302		Spindle Assembly, Right
37	056105		Bearing, Wheel Also included with Key No. 40.
38	055700		Tire
39	024373		Valve Stem Also included with Key No. 40.
40	92303-601		Wheel & Tire Assembly
41	17X197		Washer
42	094618		Cap, Hub (Optional)