

OWNER'S MANUAL

**10 H.P. 38" RIDING
LAWN TRACTOR**

MODEL NUMBER BL1038AE

Rally

Rally Products

By American Yard Products, Inc.


P.O. Box 1687

Orangeburg, SC 29116

REPAIR PARTS

LAWN TRACTOR


SCHEMATIC

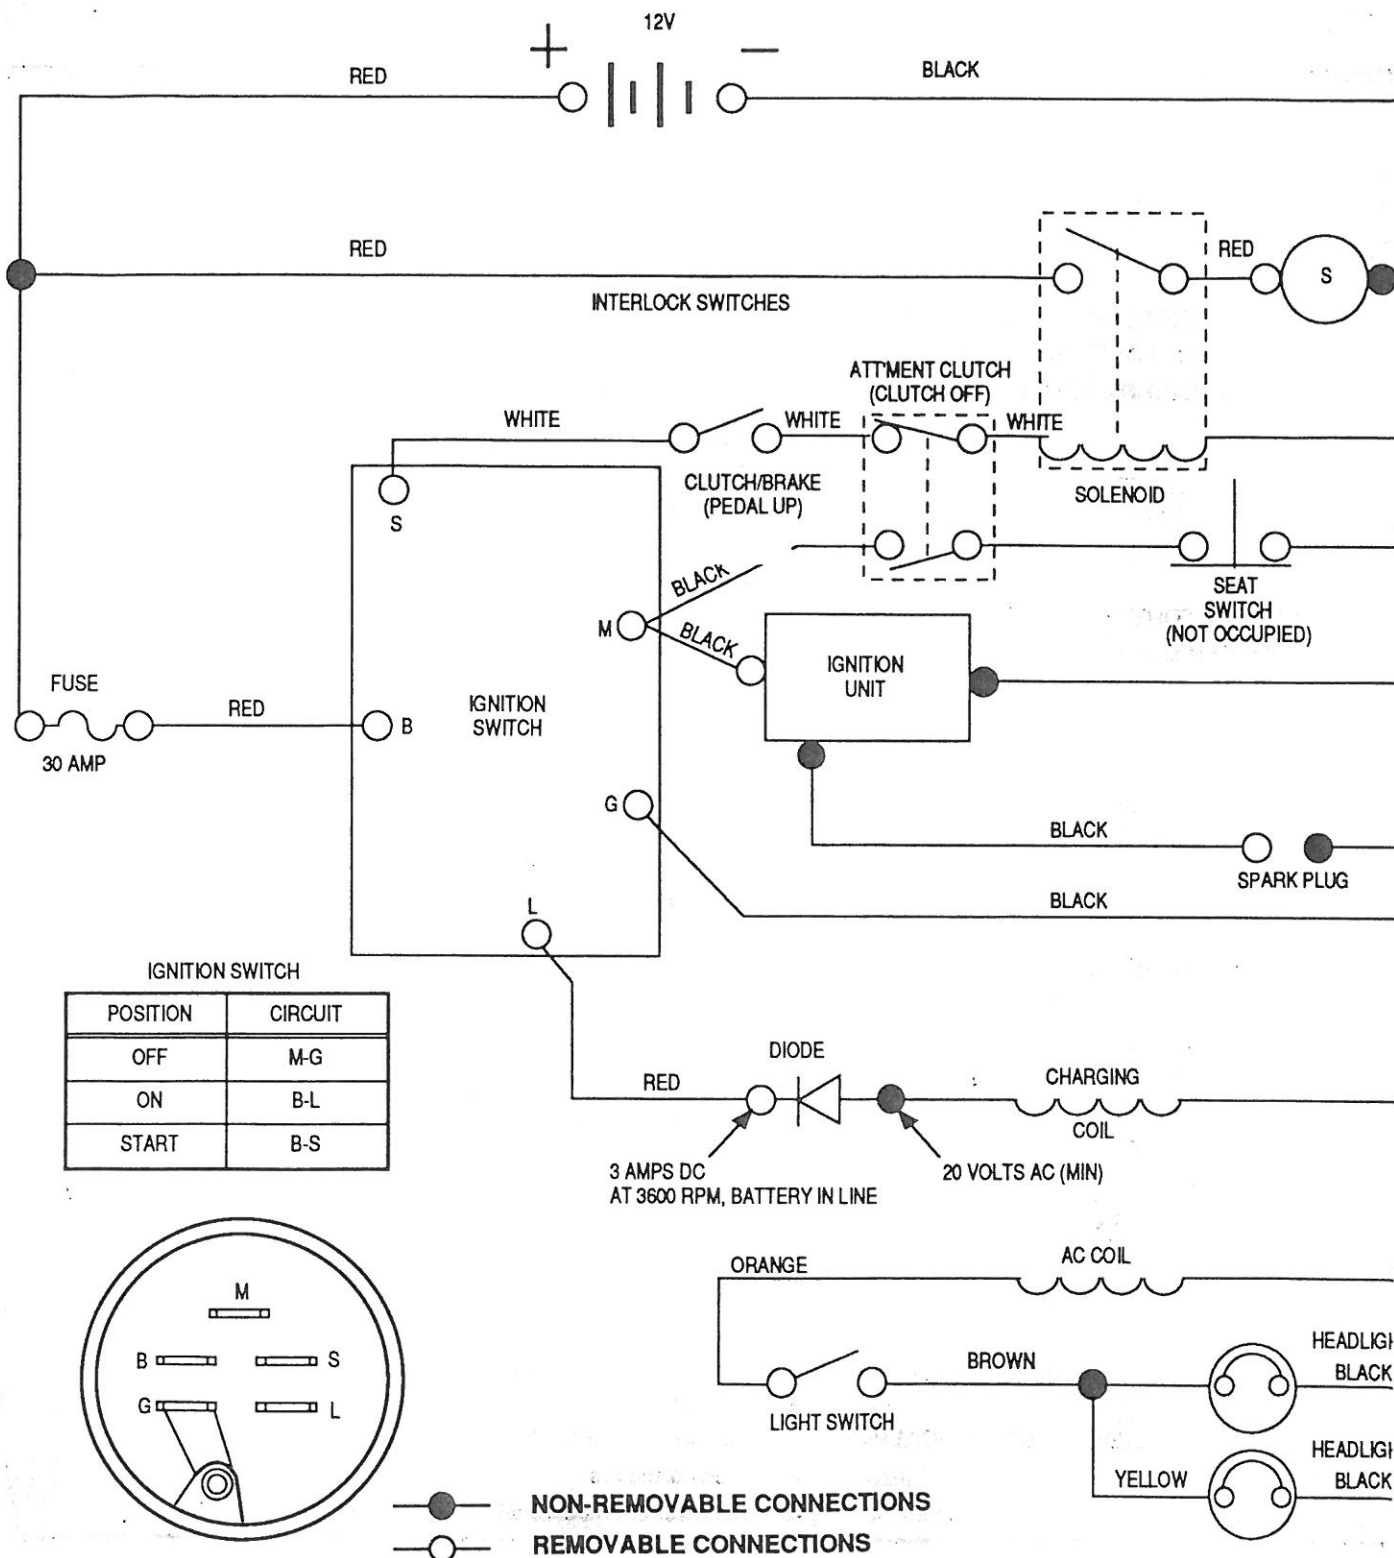

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH THE ENGINE SPEED. AT IDLE SPEED, THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.


WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS OR CABLE TIES WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

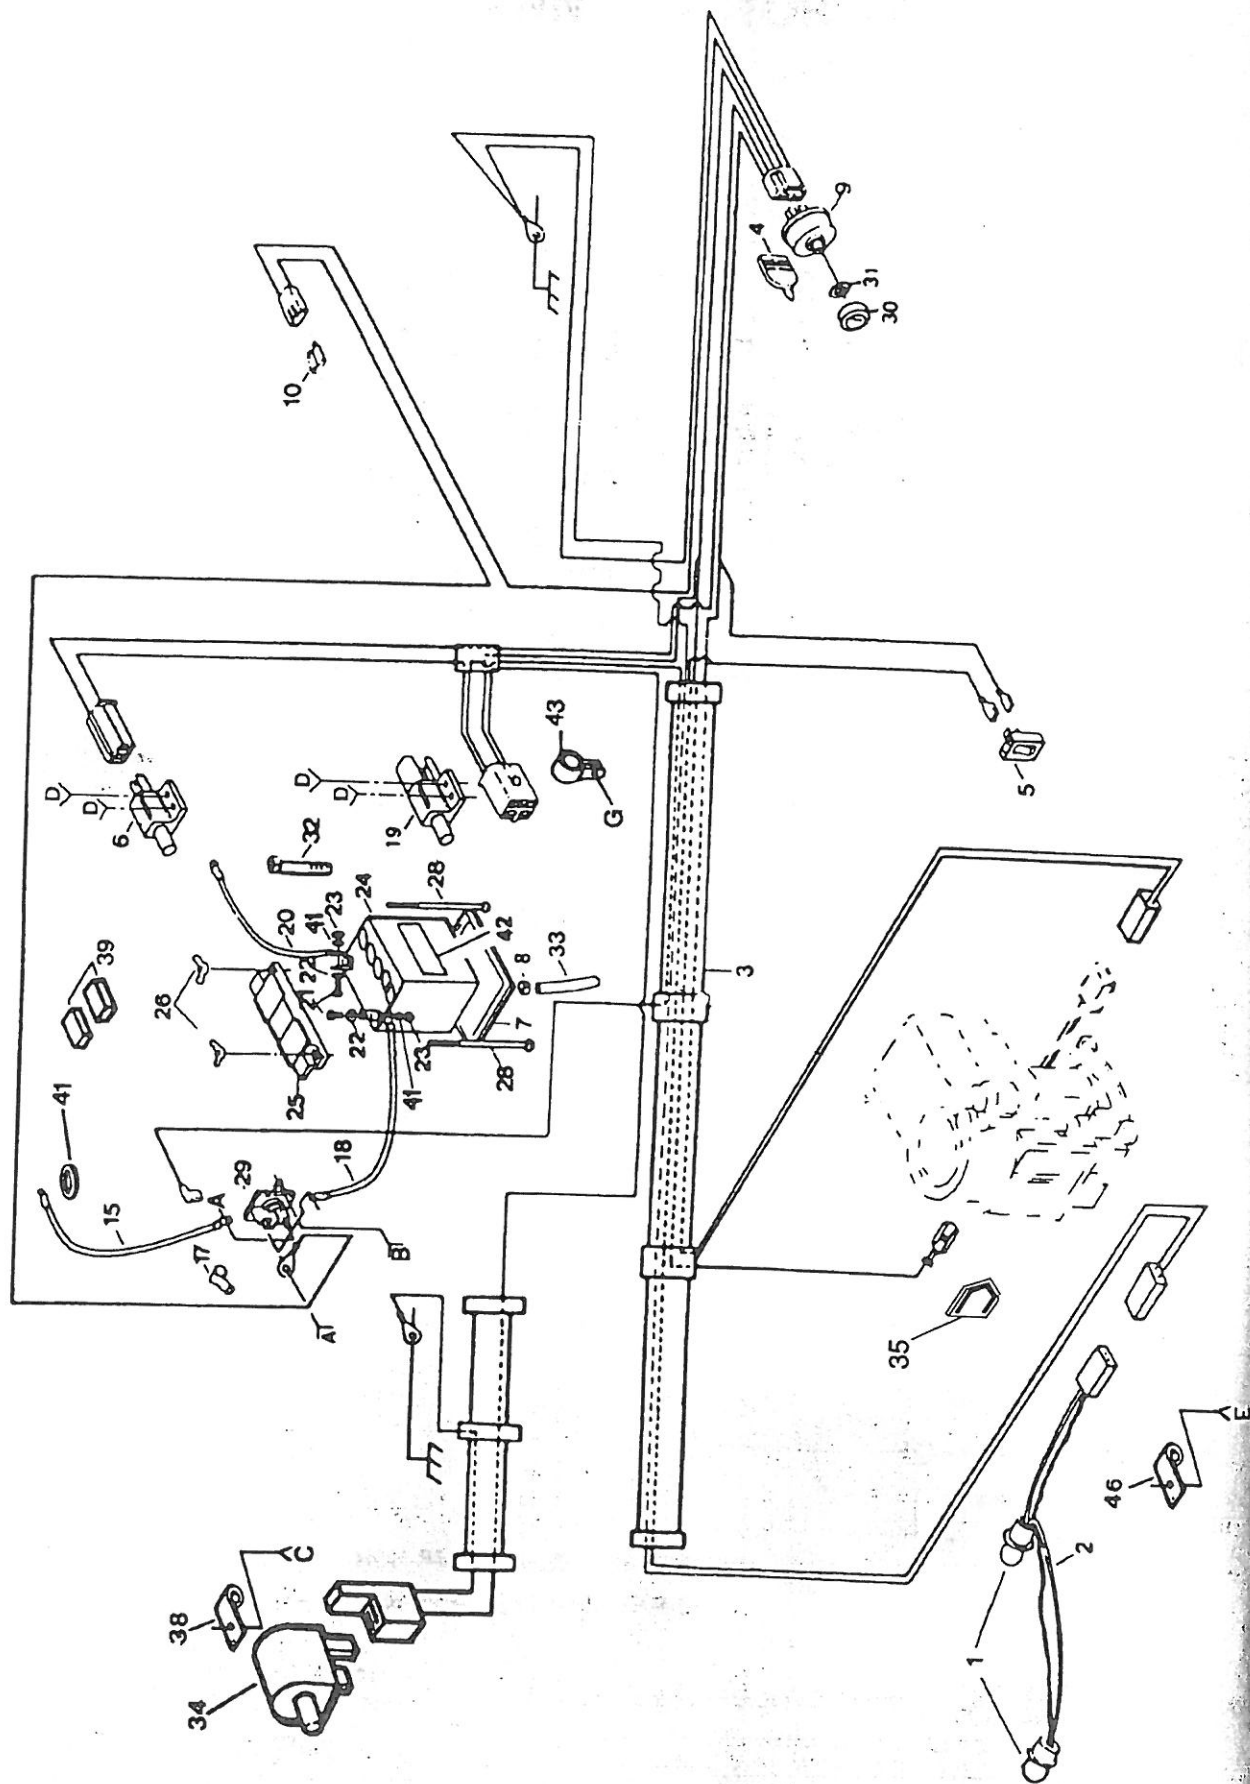

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 7662J	Bulb, Light	30 109787X	Bezel, Ignition
2 110859X	Harness, Light Socket	31 109788X	Nut, Ignition
3 124904X	Harness, Ignition	32 7192J	Tie, Cable
4 7552H	Key, Molded	33 105687X	Tube, Plastic
5 110712X	Switch, Light	34 121305X	Switch, Plunger
6 104445X	Switch, Interlock	35 125760X	Stop, Choke
7 7603J	Tray, Battery	36 74641008	Screw, Slotted Pan Head, #10-32 x 1/2
8 109596X	Clamp, Hose	37 73951000	Nut, Keps #10-32 x 1/2
9 4406R	Switch, Ignition	38 4171R	Clip, Insulated
10 108824X	Fuse, 30 Amp	39 121300X	Caps Set, Battery
11 10090400	Washer, Lock 1/4	41 10040400	Washer, Lock, Hvy. Helical Spring 1/4
12 73350400	Nut, Hex, Jam 1/4-20	42 121549X	Decal, Battery
13 74780408	Bolt, Hex 1/4-20 x 1/2 Gr.5	43 5320R	Clip, Insulated
14 73510400	Nut, Keps 1/4 -20	44 17490608	Screw, Hex, Washer, Thread Rolling 3/8 - 16 x 1/2 TY-TT
15 2033J	Assembly, Cable	45 17021008	Screw, Hex, Tap, #10 - 24 UNC x 1/2 TY-TT
16 11050400	Washer, Lock, External Tooth 1/4	46 2751R	Clip, Fuel Line
17 719J	Cover, Terminal	47 73680600	Nut, Crownlock 3/8-16 UNC
18 5114J	Cable, Battery	--- 101539X	Sheet, Instruction, Tractor 15°
19 109553X	Switch, Interlock	--- 101572X	Slope, English
20 5907J	Cable, Battery	--- 125681X	Sheet, Instruction, Tractor 15°
21 74760412	Bolt, Hex 1/4-20 x 3/4	--- 125682X	Slope, French
22 19091016	Washer 9/32 x 5/8 x 16 Ga.		Owner's Manual, English
23 73220400	Nut, Hex 1/4 -20		Owner's Manual, French
24 121310X	Battery, 12V		
25 102476X	Guard, Terminal		
26 123198X	Nut, Wing 1/4 -20		
28 72240460	Bolt, Carriage 1/4-20 x 7-1/12		
29 109081X	Solenoid		


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

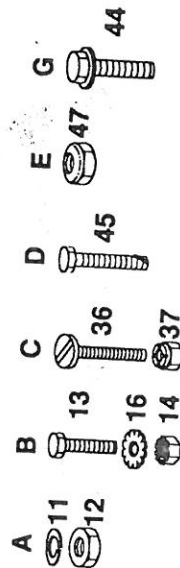

REPAIR PARTS

LAWN TRACTOR


ENCLOSURE

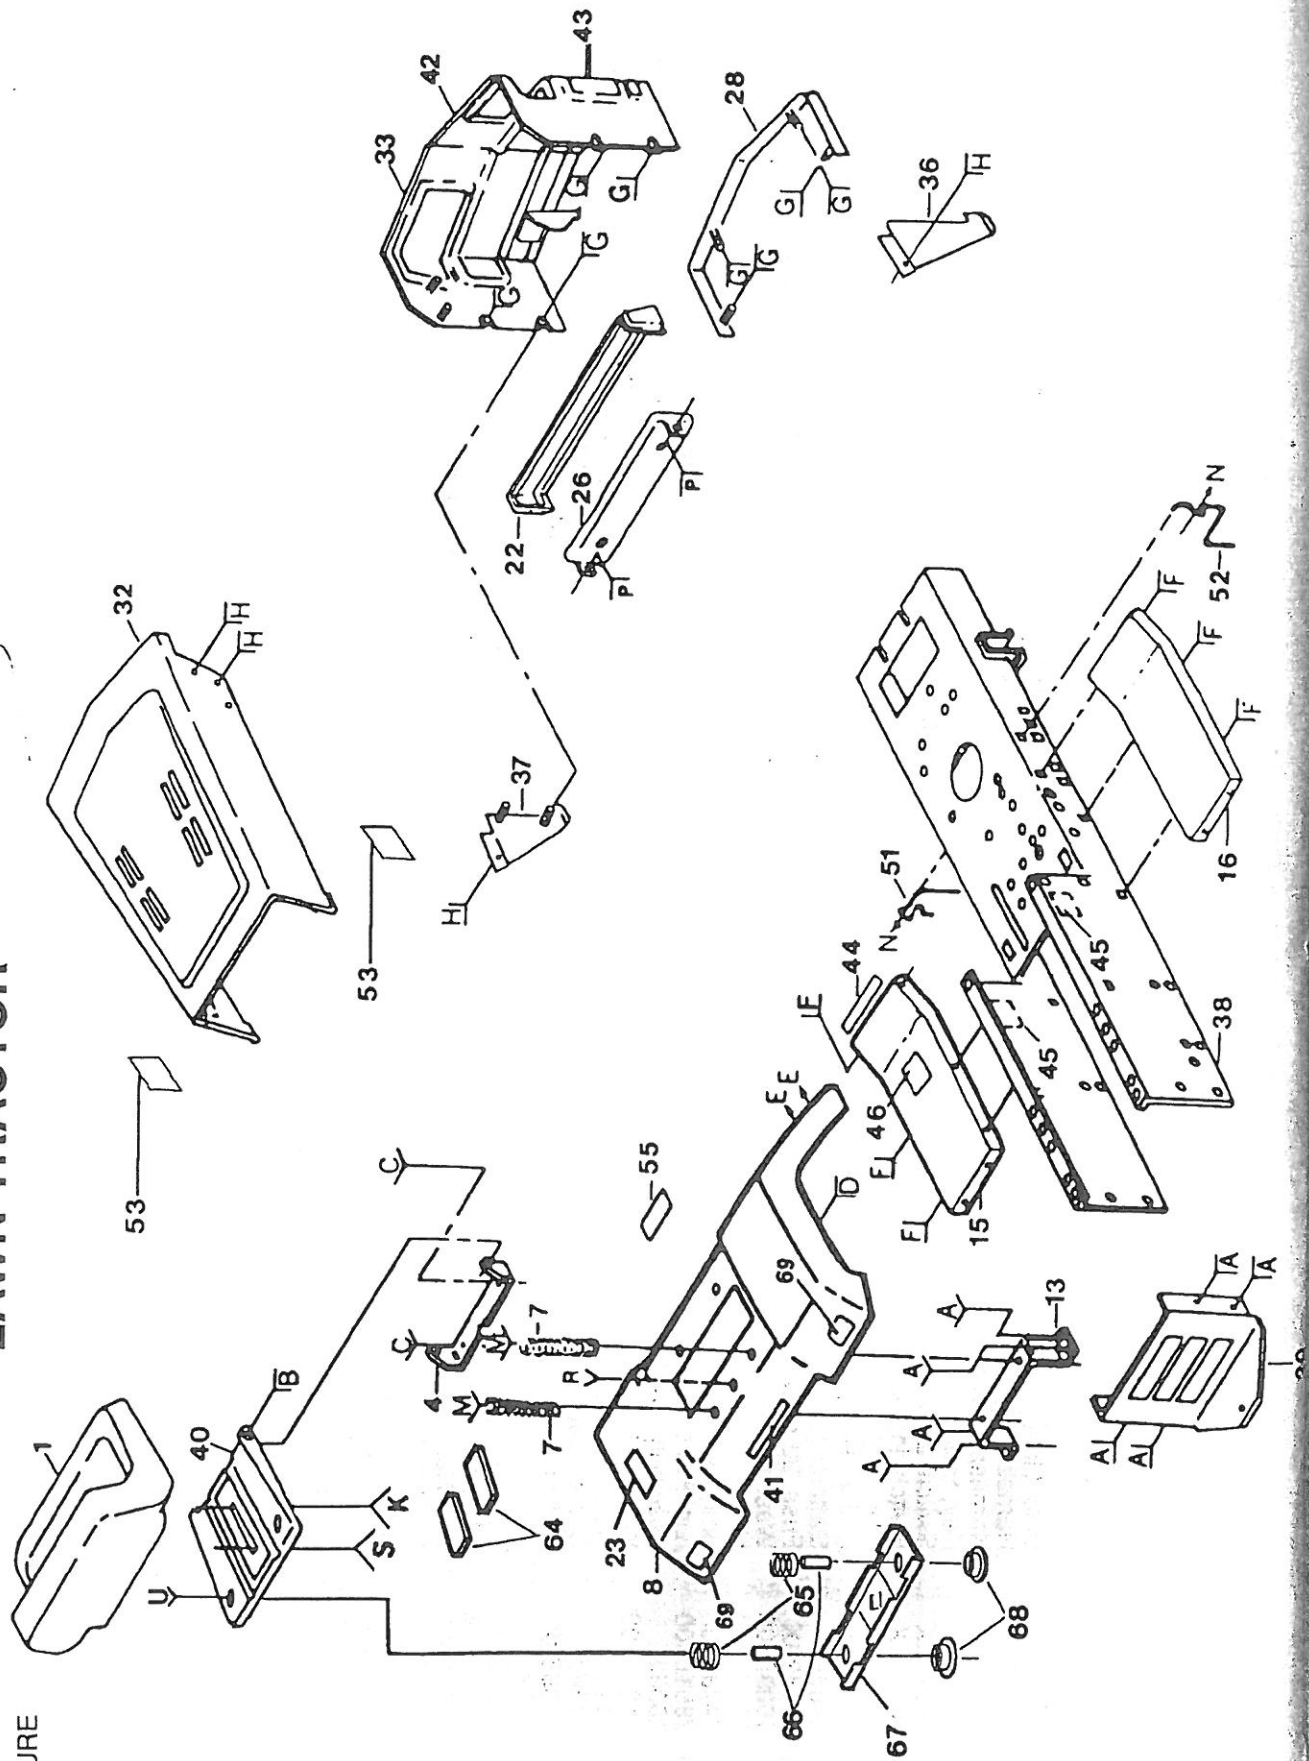

LAWN TRACTOR

ENCLOSURE

KEY PART NO.	DESCRIPTION	KEY PART NO.	DESCRIPTION
1	Seat	36	124301X419 Side Panel, R. H.
2	Screw, Hex, Washer Thread Rolling 3/8 - 16 x 3/4 Type TT	37	124302X419 Side Panel, L. H.
3	Screw, Hex, Washer Thread Rolling 3/8 - 16 x 1	38	123441X Chassis Assembly
4	Bracket, Pivot, Seat	39	121306X Drawbar
5	Bolt, Shoulder 5/16 - 18	40	124294X Pan, Seat
6	Nut, Crownlock 5/16 - 18	41	109323X Decal, Fender
7	Spring, Seat	42	124325X Decal, Grill
8	Fender	43	124326X Decal, Grill, Stripe
9	Washer 13/32 x 13/16 x 12 Ga.	44	101892X Decal, Clutch/Brake
10	Bolt, Hex, Washer Thread Rolling 3/8	45	126148X Decal, Chasis, Speed/Deck Size
11	Nut, Crownlock 3/8 - 16	46	109199X Decal, V-Belt Ground Drive
12	Screw, Hex, Washer Thread Rolling 3/8 - 16 x 12	47	19132012 Washer 13/32 x 1-1/4 x 12 Ga.
13	109873X Bracket, Fender	48	10040800 Washer, Lock 1/2
14	121144X Bolt, Shoulder	49	19171912 Washer 17/32 x 1-3/16 x 12 Ga.
15	105476X419 Footrest, L. H.	50	74760616 Bolt, Hex 3/8 - 16 x 1
16	105475X419 Footrest, R. H.	51	121440X Guide, Belt, Lower, Engine Pulley, L. H.
17	72110606 Bolt, Carriage 3/8 - 16 x 3/4	52	121441X Guide, Belt, Lower, Engine Pulley, R. H.
21	108067X Pal Nut 1/4 - 20	53	125668X Decal, Hood, 10 HP
22	126635X Lens, Headlight	55	109823X Decal, Caution
23	125690X Decal, 100 DBA	56	124201X Screw, Hex, Button Head
24	19131210 Washer 13/32 x 3/4 x 10 Ga.	59	19131614 Washer 13/32 x 1 x 14 Ga.
25	73800400 Locknut, w/insert 1/4 - 20 UNC	60	19091216 Washer 9/32 x 3/4 x 16 Ga.
26	110897X Bezel, Headlight	62	72170410 Bolt, Carriage 1/4 - 20 x 1-1/4
27	74780816 Bolt, Hex 1/2 - 13 x 1	63	123976X Nut, Hex, Flange 1/4 - 20
28	109745X419 Strap Assembly, Grill	64	121251X Strip, Foam
29	19090816 Washer 9/32 x 1/2 x 16 Ga.	65	121250X Spring, Compression
32	124304X010 Hood Assembly	66	121249X Spacer, Split
33	124323X419 Grill Assembly	67	121246X Bracket, Switch Mount
		68	121248X Bushing, Snap
		69	106202X Reflector, Tail

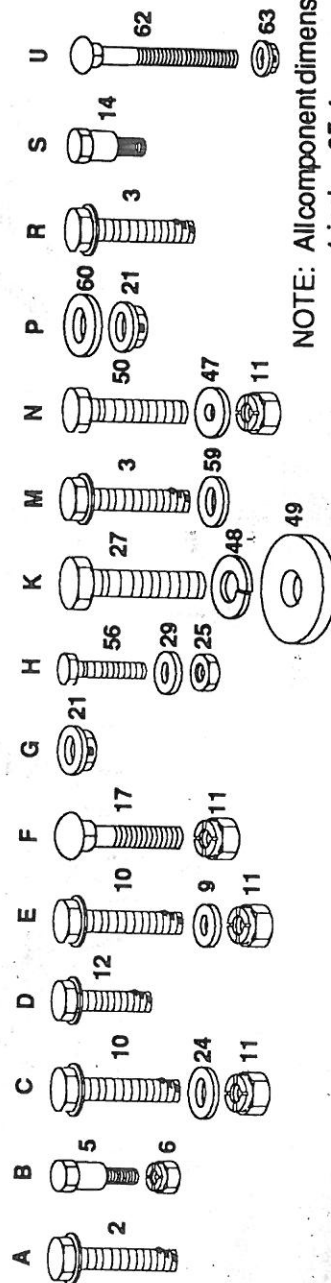


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

LAWN TRACTOR

DRIVE

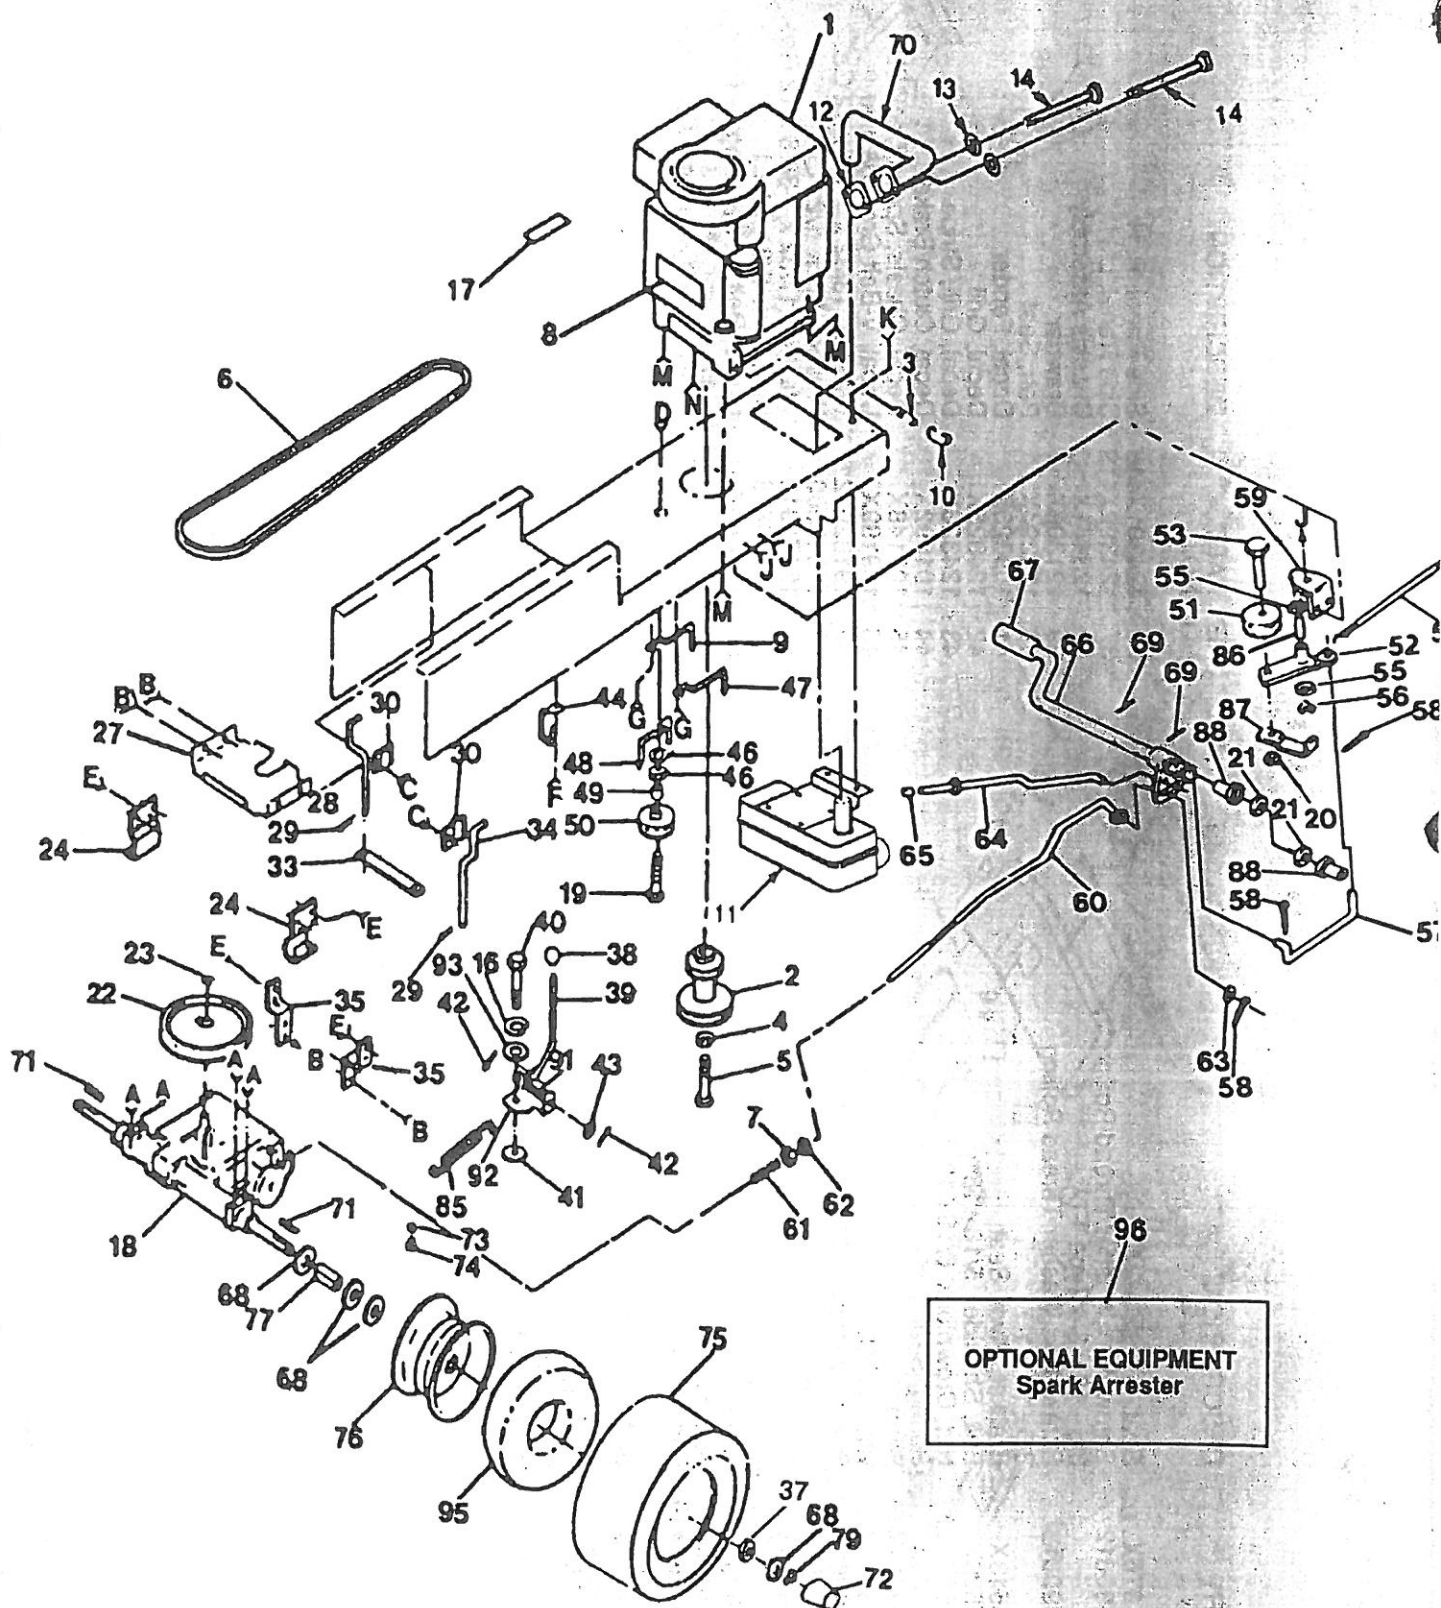

REPAIR PARTS


LAWN TRACTOR

DRIVE

KEY PART NO. NO.	DESCRIPTION
1 121797X	Engine 10 HP, Briggs & Stratton Model No. 255707, Type No. 0122-01
2 105731X	Pulley, Engine
3 123995X	Pipe, Drain, Oil
4 10040700	Washer, Lock 7/16
5 74770720	Bolt, Hex 7/16-20 x 1-1/4
6 125907X	V-Belt, Drive
7 73800600	Locknut, Hex 3/8-16 UNC ZN
8 108760X	Decal, 10 HP Engine
9 121218X	Keeper, Belt, Engine
10 13030200	Plug, Drain Oil
11 123075X	Muffler
12 125593X	Gasket
13 10040500	Washer, Lock Heavy Helical Spring
14 71070510	Screw, Hex Head Cap 5/16-18 x 5
15 17490620	Screw, Hex., Washer Thread Rolling 3/8-16 x 1-1/4
16 10040400	Washer, Lock 1/4
17 108761X	Decal, Engine Maintenance
18 120896X	Transaxle Foote, 4 Speed, Model No. 4360-5
19 74760644	Bolt, Hex 3/8-16 x 2-3/4
20 73680600	Nut, Crownlock 3/8-16
21 19211616	Washer 21/32 x 1 x 16 Ga
22 123666X	Pulley, Transaxle
23 12000028	Ring, Retainer
24 109167X	Bracket, Transaxle
25 74760616	Bolt, Hex 3/8-16 x 1
26 17490612	Screw, Hex Washer Thread Rolling 5/16-18 x 3/4
27 108171X	Support, Battery
28 123662X	Keeper, Belt, L.H.
29 4921H	Retainer, Spring
30 106190X	Clamp
31 74760512	Bolt, Hex 5/16-18 x 3/4
32 73680500	Nut, Crownlock 5/16-18 x 3/4
33 123770X	Strap, Locator
34 123663X	Keeper, Belt, R.H.
35 121580X	Strap, Torque, Transaxle
36 74760612	Bolt, Hex 3/8-16 x 3/4
37 121748X	Washer 25/32 x 1-5/8 x 16 Ga.
38 108279X	Knob, Shift
39 124401X	Rod, Shift
40 71040412	Washer, Shift Plate
41 105701X	Washer, Shift Plate
42 76020416	Pin, Cotter 1/8 x 1
43 19151216	Washer 15/32 x 3/4 x 16 Ga.
44 104777X	Belt, Retainer

KEY PART NO. NO.	DESCRIPTION
45 17490612	Screw, Hex., Washer Thread Rolling 3/8-16 x 3/4
46 19131312	Washer 13/32 x 13/16 x 12 Ga.
47 105730X	Keeper, Belt, Engine
48 109070X	Retainer, Belt
49 4470J	Spacer
50 123674X	Idler, Flat
51 123766X	Pulley, Idler
52 123789X	Arm, Idler
53 74760624	Bolt, Hex. 3/8-16 x 1-1/2
54 105709X	Spring, Return Clutch
55 110812X	Washer, Hardened
56 12000039	Ring, Klip
57 105710X	Link, Clutch
58 76020412	Pin, Cotter 1/8 x 3/4
59 123102X	Bracket, Clutch
60 110437X	Rod, Brake
61 106888X	Spring, Rod, Brake
62 73350600	Nut, Jam 3/8-16
63 19131316	Washer 13/32 x 13/16 x 16 Ga.
64 125638X	Rod, Brake, Parking
65 7733J	Cap, Plunger
66 122424X	Shaft, Foot Pedal
67 8883R	Cover, Pedal
68 121749X	Washer 25/32 x 1-1/4 x 16
69 1572H	Pin, Roll 3/16 x 1
70 123074X	Pipe, Exhaust 180°
71 123583X	Key, Square 2.5 x .1845/.1865
72 104757X	Cap, Hub
73 59192	Cap, Valve
74 65139	Stem, Valve
75 126182X	Tire, Rear
76 124160X311	Rim Assembly, Rear
77 109502X	Spacer
79 12000001	E-Ring
83 19112016	Washer 11/32 x 1-1/4 x 16 Ga.
84 72140606	Bolt, Carriage 3/8 - 16 x 3/4
85 110422X	Spring, Brake
86 105706X	Bearing
87 123205X	Retainer, Belt
88 120183X	Bearing, Nylon
91 105700X	Spring
92 106919X	Plate, Shift
93 19091210	Washer 9/32 x 3/4 x 10 Ga.
94 11050600	Washer, Lock, External Tooth 3/8
95 7152J	Tube, Tire (not furnished with tractor)
96 123110X	Spark Arrester


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

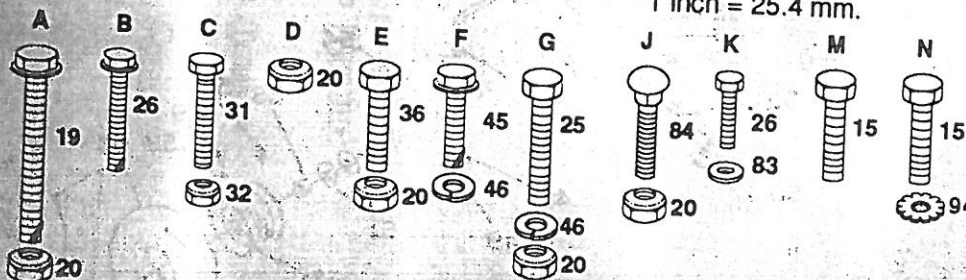

REPAIR PARTS

LAWN TRACTOR

STEERING AND FRONT AXLE

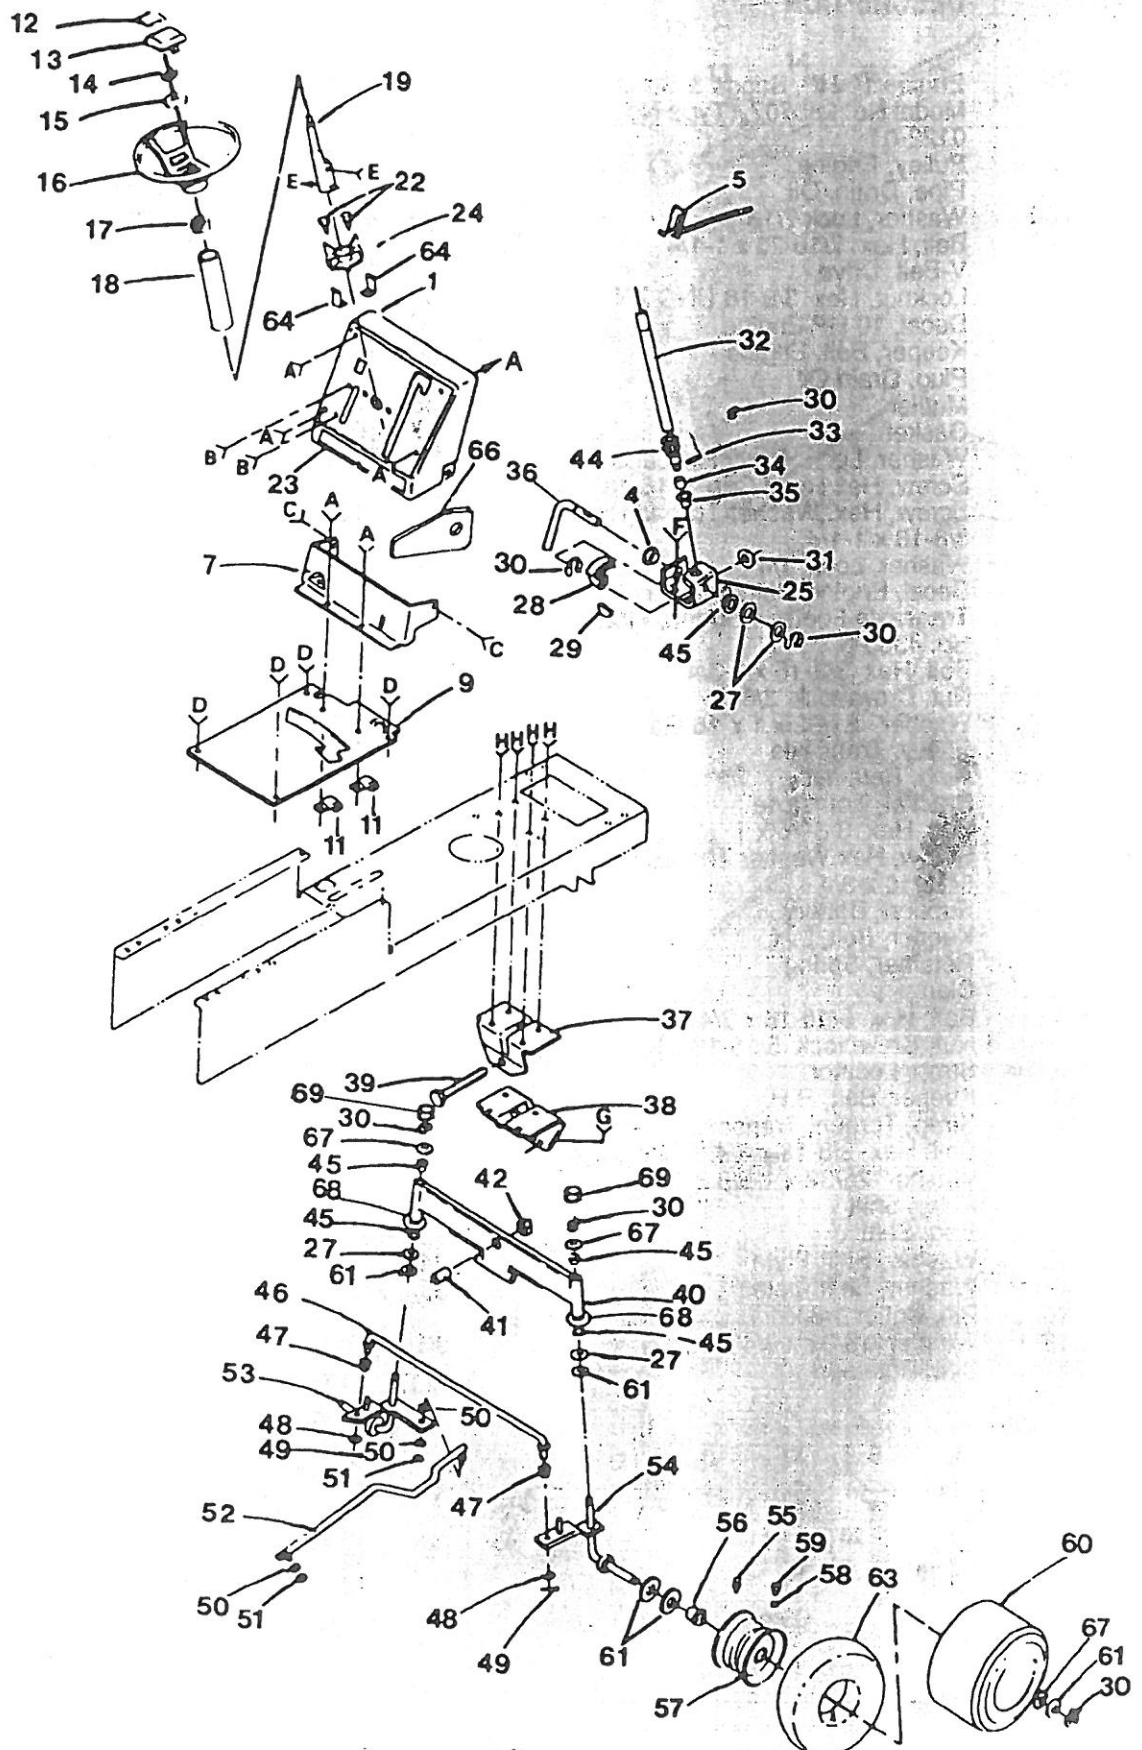

REPAIR PARTS


LAWN TRACTOR

STEERING AND FRONT AXLE

KEY PART NO.	NO.	DESCRIPTION
1	109283X016	Dash
2	74180512	Screw, Truss Head 5/16 - 18 x 3/4
3	73510500	Nut, Keps 5/16 - 18
4	109816X	Nyliner, Snap-in
5	125665X	Control, Throttle
6	17720410	Screw, Hex, Thread Cutting 1/4 - 20 x 5/8 TY23
7	105621X	Dash, Lower
	17190508	Screw, Hex, Thread Cutting 5/16 - 18 x 1/2
9	124465X012	Saddle
10	17490608	Screw, Hex, Washer Head Thread Rolling 3/8-16 x 1/2
11	2751R	Clip, Insulated
12	109325X	Decal, Steering Wheel
13	100710L	Insert, Steering Wheel
14	73940800	Locknut, Hex, Jam 1/2 - 20
15	100712K	Washer
16	100713N	Wheel, Steering
17	100711L	Adapter, Steering Wheel
18	109285X	Sleeve, Steering
19	123136X	Shaft, Steering, Upper
20	74760620	Bolt, Hex 3/8-16 x 1-1/4
21	73680600	Nut, Crownlock 3/8 - 16
22	17431008	Screw, Hex Tapping #10-16 x 1/2 Type ABTPS
23	109821X	Decal, Instruction, Operating
24	109284X	Bushing, Steering
25	109432X	Bracket, Steering
26	17490612	Screw, Hex Washer Head, Thread Rolling 3/8-16 x 3/4 Type TT
27	6266H	Bearing, Thrust
28	108684X	Gear, Sector
29	106126X	Key, Woodruff
30	12000029	Ring, Klip
31	101930X	Washer, Hardened
32	109068X	Shaft, Steering, Lower
33	2882J	Pin, Drive 3/16 x 1

KEY PART NO.	NO.	DESCRIPTION
34	74580	Spacer .627 x .88 x .695
35	71208	Bushing
36	108683X	Rod, Steering
37	105663X	Support, Saddle, Rear
38	105664X	Support, Saddle, Front
39	74761060	Bolt, Hex 5/8-11 x 3-3/4
40	105669X	Axle, Front
41	110438X	Spacer, Bearing, Front Axle
42	73901000	Locknut, Flange 5/8-11
43	17490508	Screw, Hex Washer Head, Thread Rolling 5/16-18 x 1/2 Type TT
44	108685X	Gear, Pinion
45	3366R	Bearing
46	105715X	Rod, Tie
47	120754X	Bushing
48	19131416	Washer 13/32 x 7/8 x 16 Ga.
49	76020412	Pin, Cotter 1/8 x 3/4
50	10040600	Washer, Lock 3/8
51	73610600	Nut, Hex 3/8 - 24
52	105727X	Link, Drag
53	105656X	Spindle, L. H.
54	105654X	Spindle, R. H.
55	278H	Fitting, Grease
56	9040H	Bearing, Flange
57	106732X311	Rim, 6", Front (Inc. 2 Each Key No. 56)
58	59192	Cap, Valve
59	65139	Stem, Valve
60	124157X	Tire
61	121749X	Washer 25/32 x 1-1/4 x 16 Ga.
62	104757X	Cap, Hub
63	59904	Tube, Front (not furnished with tractor)
64	110130X	Retainer, Steering
66	110307X	Stop, Mower, Clutch Lever
67	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
68	19272016	Washer 27/32 x 1-1/4 x 16 Ga.
69	121232X	Cap, Spindle
70	122819X	Screw, Special 3/8-16 x 3/4 TY-TT


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

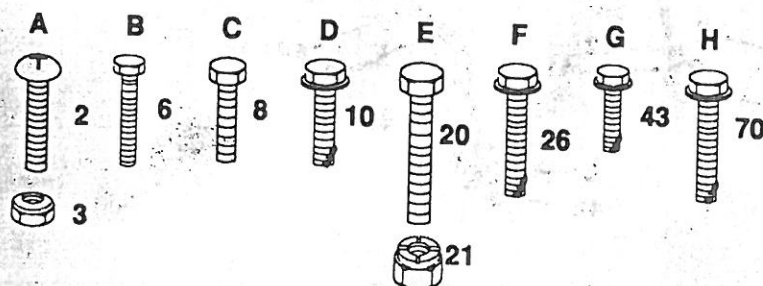

REPAIR PARTS

LAWN TRACTOR

LIFT ADJUSTMENT

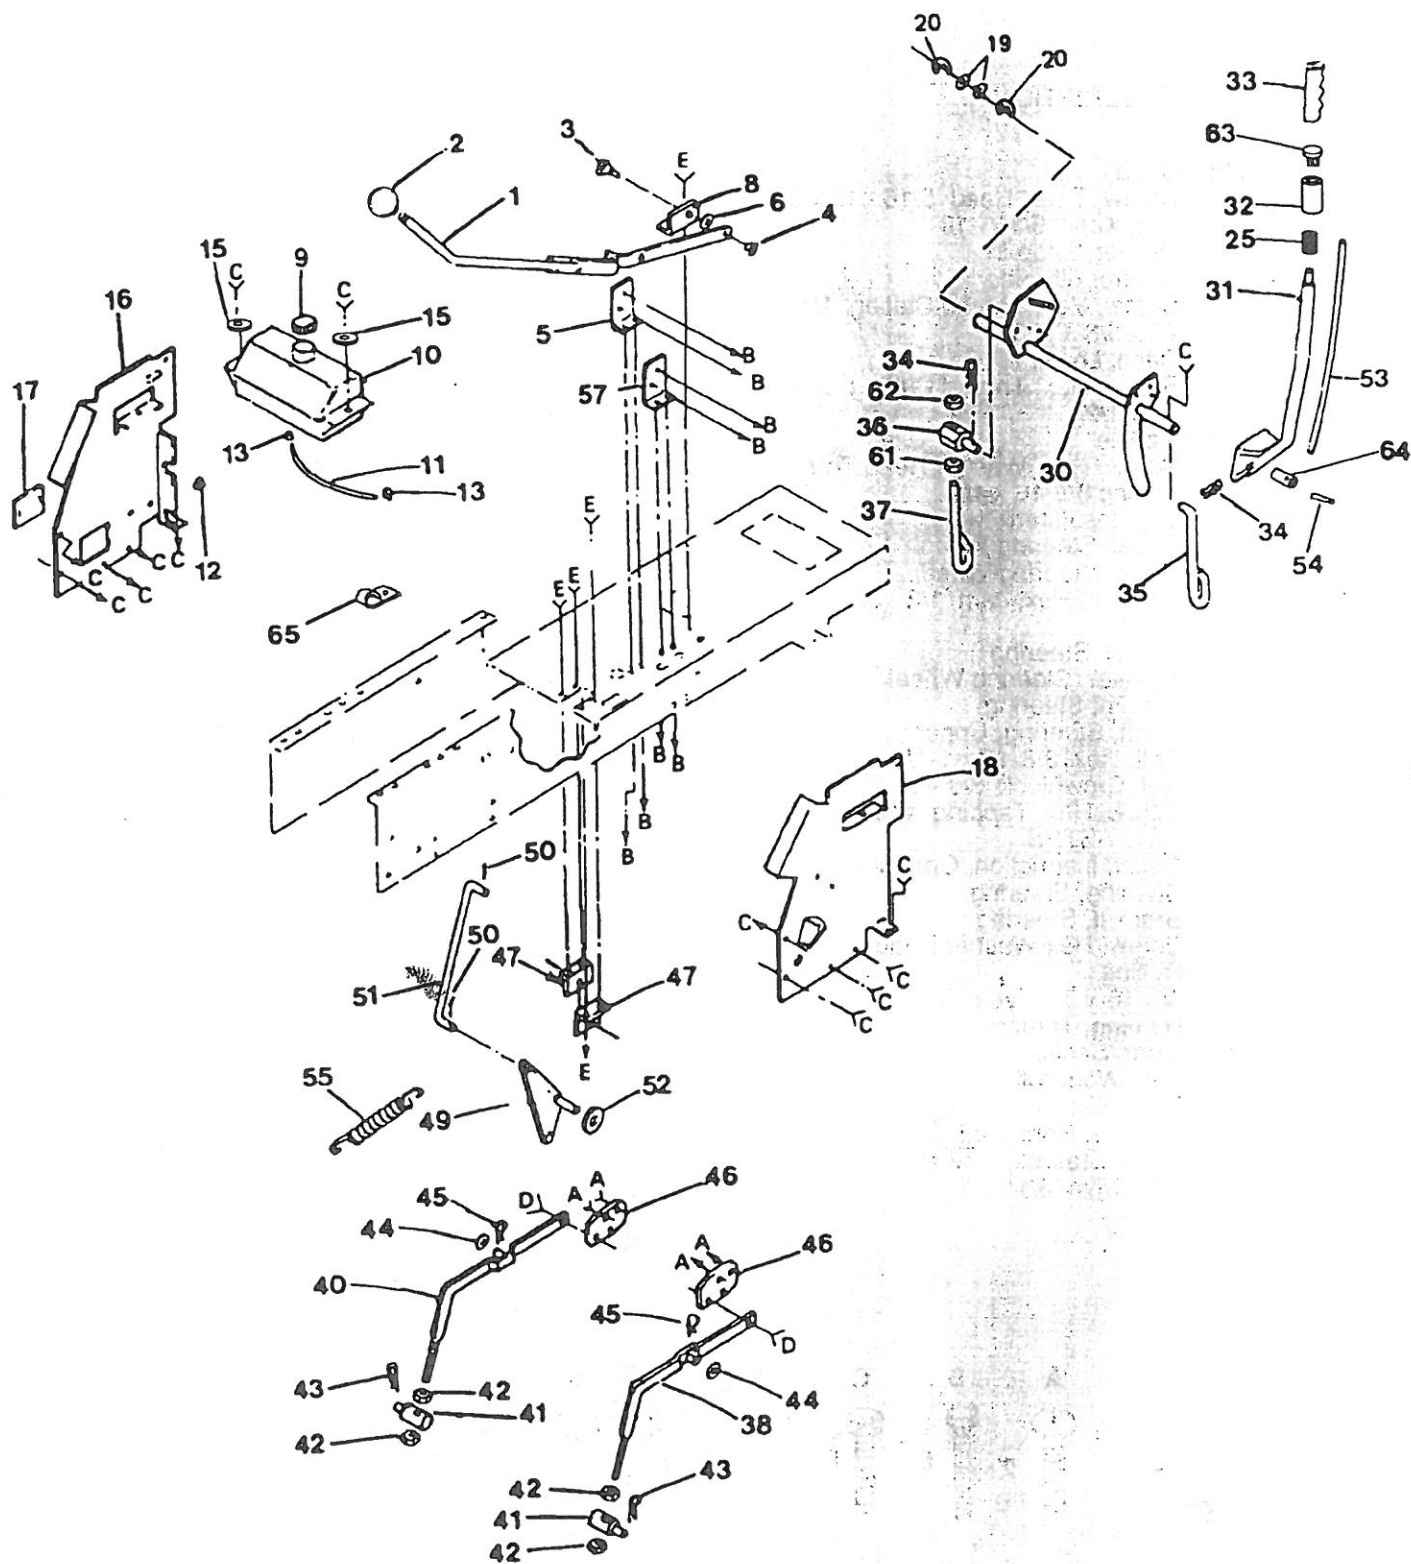

REPAIR PARTS


LAWN TRACTOR

LIFT ADJUSTMENT

KEY PART NO.	NO.	DESCRIPTION
1	124429X	Handle, Clutch, Mower
2	7803J	Knob
3	106451X	Bolt, Shoulder
4	73680600	Nut, Crownlock 3/8-16
5	106452X	Bracket, Switch, Interlock
6	19171516	Washer 17/32 x 15/16 x 16 Ga.
7	17021008	Screw, Hex., Tapping, #10-24 x 1/2
8	106447X	Support, Lever, Clutch
9	123549X	Cap, Fuel
10	109202X	Tank, Fuel
11	8548R	Line, Fuel
12	9151R	Grommet
13	123487X	Clamp, Hose
14	17490612	Screw, Hex., Washer Head, Thread Rolling 3/8-16 x 3/4
15	19131612	Washer 13/32 x 1 x 12 Ga.
16	106920X	Panel, Dash, L. H.
17	121794X	Cover, Access
18	124431X	Panel, Dash, R. H.
19	19292016	Washer 29/32 x 1-1/4 x 16 Ga.
20	12000022	E-Ring
25	2876H	Spring
30	120420X	Shaft, Lift
31	105768X	Lever, Assembly
32	122364X	Plunger
33	109413X	Grip, Handle
34	4939M	Retainer, Spring
35	110029X	Link, Lift

KEY PART NO.	NO.	DESCRIPTION
36	110447X	Trunnion, Lift
37	110448X	Link, Lift, Adjustable
38	121598X	Arm, Suspension, R. H.
39	105848X	Bolt, Shoulder 3/8-16
40	121599 X	Arm, Suspension, L. H.
41	106308X	Trunnion, Lift, Lower
42	73220800	Nut, Hex. 1/2 - 13
43	9135R	Retainer, Spring
44	19171516	Washer 17/32 x 15/16 x 16 Ga.
45	4921H	Retainer, Spring
46	105864X	Bracket, Suspension
47	106444X	Bracket, Bellcrank
48	74760612	Bolt, Hex 3/8-16 x 3/4
49	109728X	Bellcrank Assembly
50	76020412	Pin, Cotter 1/8 x 3/4
51	106446X	Rod, Clutch, Primary
52	19131410	Washer 13/32 x 7/8 x 10 Ga.
53	105765X	Rod, Lever, Lift
54	105767X	Pin, Groove
55	106810X	Spring, Extension
56	72140606	Screw 3/8-16 x 3/4
57	108236X	Bracket, Switch
59	110739X	Washer, Spring
60	73980600	Locknut, Flange 3/8-16
61	73360700	Nut, Hex. Jam 7/16-20
62	73710700	Nut, Crownlock 7/16-20
63	124385X	Plunger, Button
64	105766X	Couple, Lever, Lift
65	5320R	Clip, Insulated


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

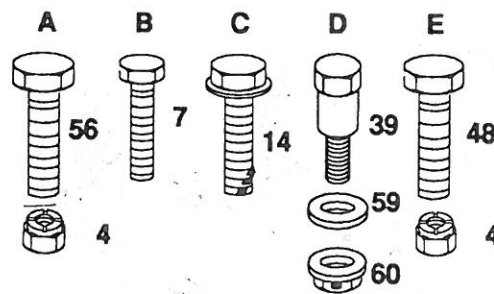

REPAIR PARTS

LAWN TRACTOR

38" MOWER

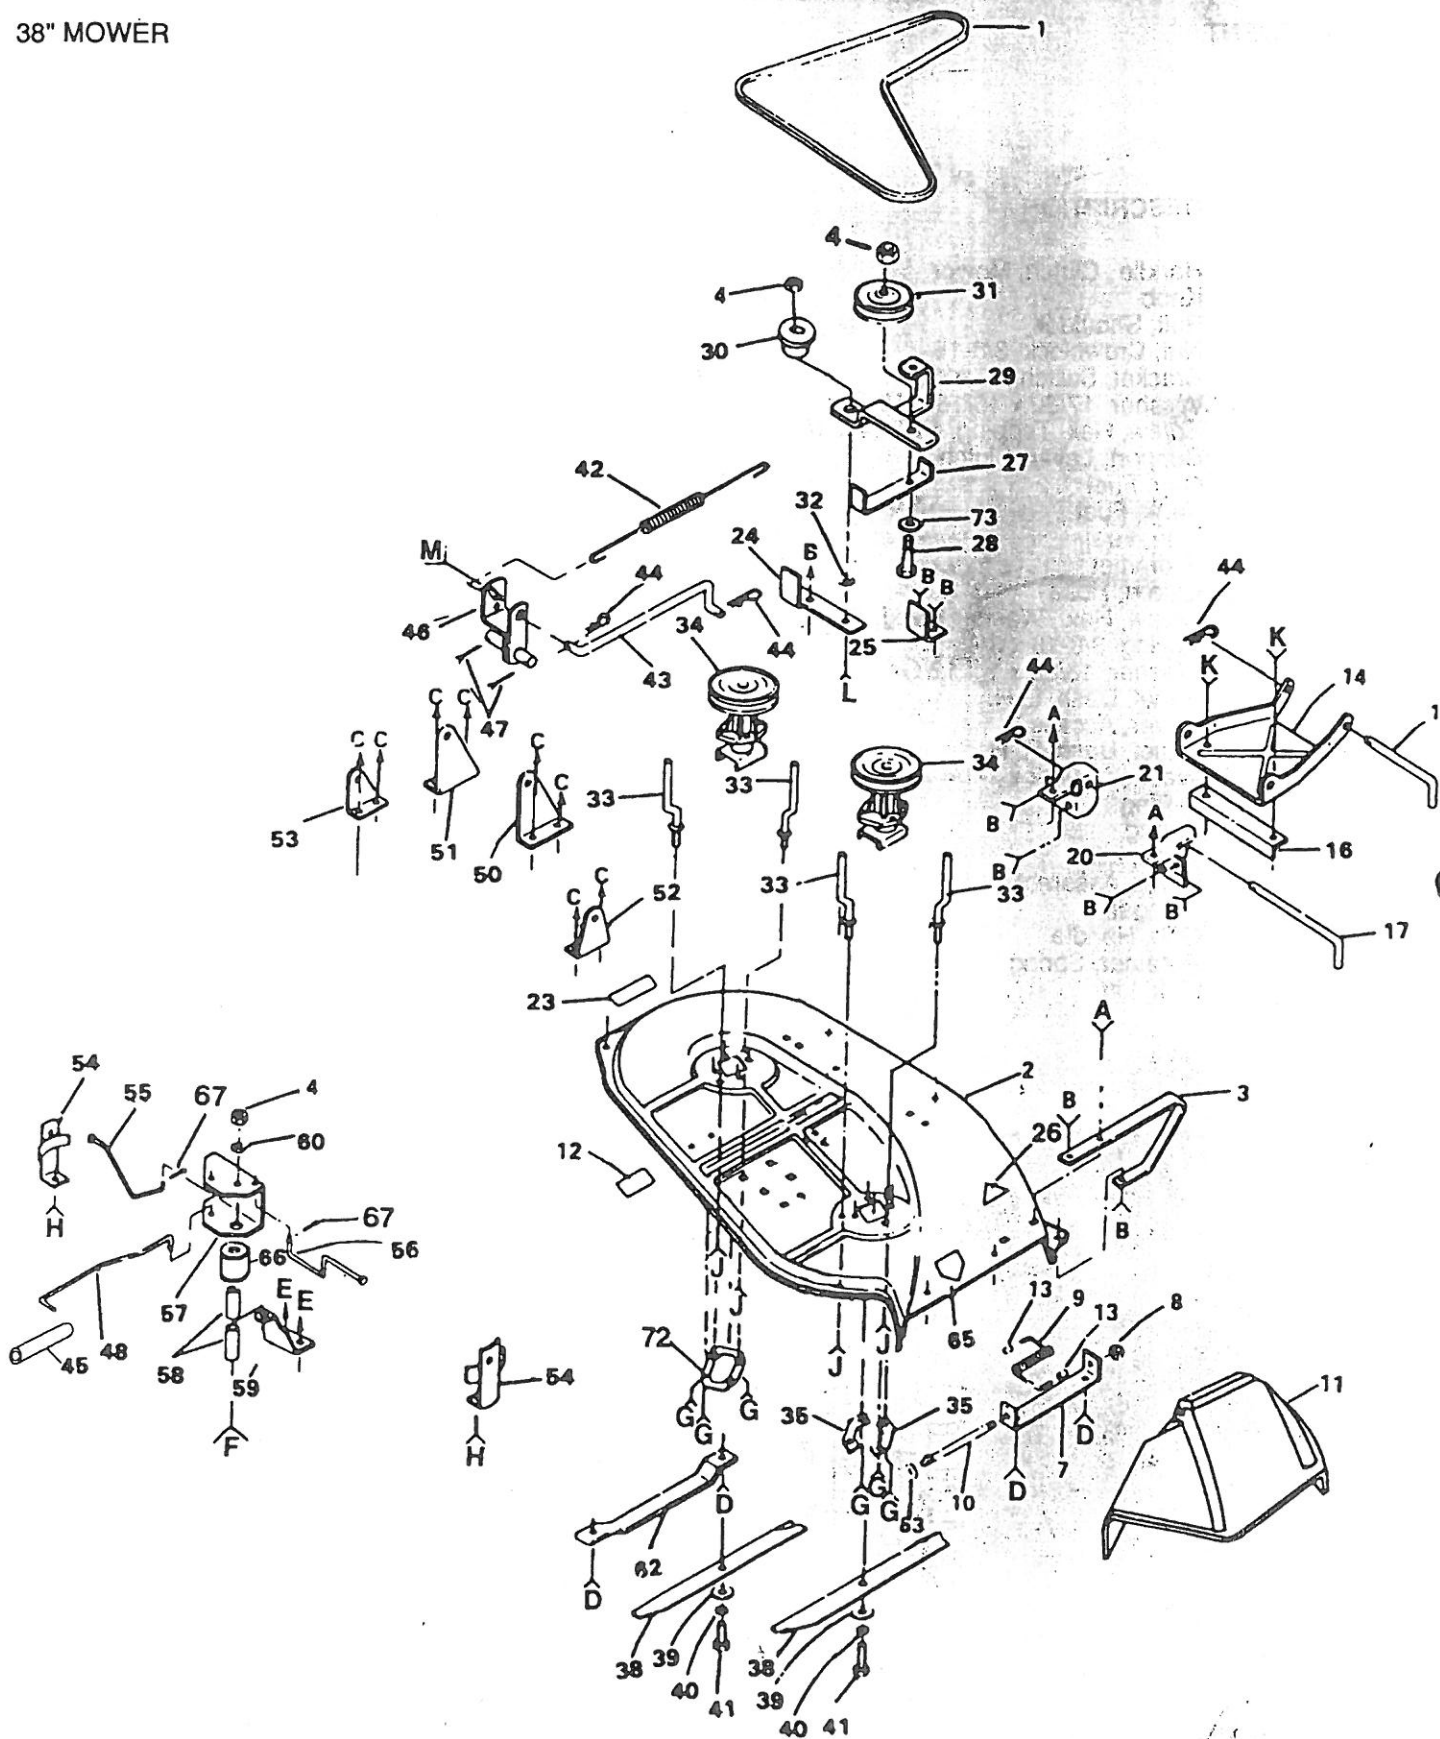

REPAIR PARTS


LAWN TRACTOR

36" MOWER

KEY PART NO. NO.	DESCRIPTION
1 106085X	V-Belt
2 121259X	Housing 144725
3 8417J	Runner, R. H.
4 73680600	Nut, Crownlock 3/8-16
5 19111216	Washer 11/32 x 3/4 x 16 Ga.
6 72140505	Bolt, Carriage 5/16-18 x 5/8
7 105896X	Bracket, Deflector
8 110452X	Pushnut
9 106734X	Spring, Deflector
10 106735X	Rod, Hinge
106736X	Shield, Deflector
12 105814X	Decal, V-Belt Mower Drive
13 105304X	Cap
14 105662X	Link, Parallel
15 105744X	Pin, Hinge, Front
16 105872X	Stop, Link
17 109835X	Pin, Hinge, Rear
18 74760612	Bolt 3/8-16 x 3/4
19 73680500	Nut, Crownlock 5/16-18
20 109598X	Bracket, Lift, R. H.
21 109597X	Bracket, Lift, L. H.
22 72140506	Bolt, Carriage 5/16-18 x 3/4
23 109820X	Decal, Instruction, Caution
24 109503X	Support, Arm
25 109504X	Stop, Deck, Front
26 -----	Decal, Safety Standard (not serviced)
27 123204X	Guide, Belt
28 74760632	Bolt 3/8-16 x 2
29 123553X	Arm, Idler
30 106902X	Spacer, Retainer
31 121316X	Pulley, Idler
106513X	Washer, Wear 1/16
102669X	Keeper, Belt
34 121687X	Mandrel Assembly
35 100668L	Plate, Support, Mandrel
36 17490614	Screw, Hex Washer Head. 3/8-16 x 7/8

KEY PART NO. NO.	DESCRIPTION
37 17490620	Screw, Hex Washer Head 3/8-16 x 1-1/4
38 122264X	Blade
39 19132012	Washer 13/32 x 1-1/4 x 12 Ga.
40 10030600	Washer, Lock 3/8
41 74610624	Bolt, Hex. 3/8 - 24 x 1-1/2 Gr. 5
42 108250X	Spring, Extension
43 108235X	Rod, Clutch, Mower
44 4921H	Spring, Retainer
45 6404J	Spacer 1/2 x 9/16
46 124066X	Rock Shaft Assembly
47 76020616	Pin, Cotter 3/16 x 1
48 108247X	Rod, Brake, Primary
49 72140606	Bolt, Carriage 3/8-16 x 3/4
50 108243X	Bracket, Pivot, R. H.
51 108241X	Bracket, Pivot, L. H.
52 105857X	Bracket, Suspension, Rear, R. H.
53 108673X	Bracket, Suspension, Rear, L. H.
54 106578X	Brake Assembly
55 106463X	Rod, Brake, Secondary, L. H.
56 108249X	Rod, Brake, Secondary, R. H.
57 106456X	Bracket, Brake, Pivot
58 100672K	Spacer, Brake
59 100673L	Bracket, Support
60 19131614	Washer 13/32 x 1 x 14 Ga.
61 74760688	Bolt 3/8-16 x 5-1/2
62 7631J	Runner, L. H.
63 19111016	Washer 11/32 x 5/8 x 16 Ga.
64 72140610	Bolt 3/8-16 x 1-1/4
65 121349X	Decal, Warning
66 122314X	Spacer
67 76020308	Pin, Cotter 3/32 x 1/2
68 72110506	Bolt, Carriage 5/16 - 18 x 3/4
69 74760412	Bolt, Hex. 1/4 - 20 x 3/4
70 109893X	Washer, Special
71 73680400	Nut, Crownlock 1/4-20
72 110445X	Support, Mandrel, L. H.
73 19131316	Washer 13/32 x 13/16 x 16 Ga.
NLA → 123928X	Mower Assembly, Complete


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

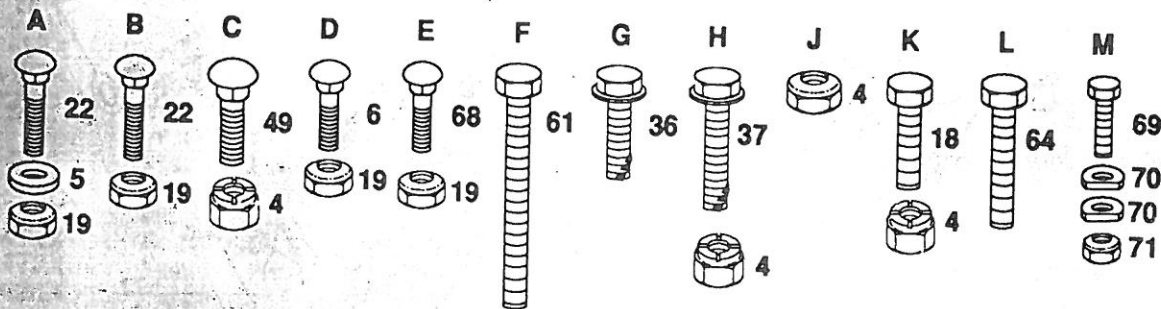

REPAIR PARTS

LAWN TRACTOR TRANSAXLE FOOTE-MODEL NUMBER 4360-5

TRANSAXLE

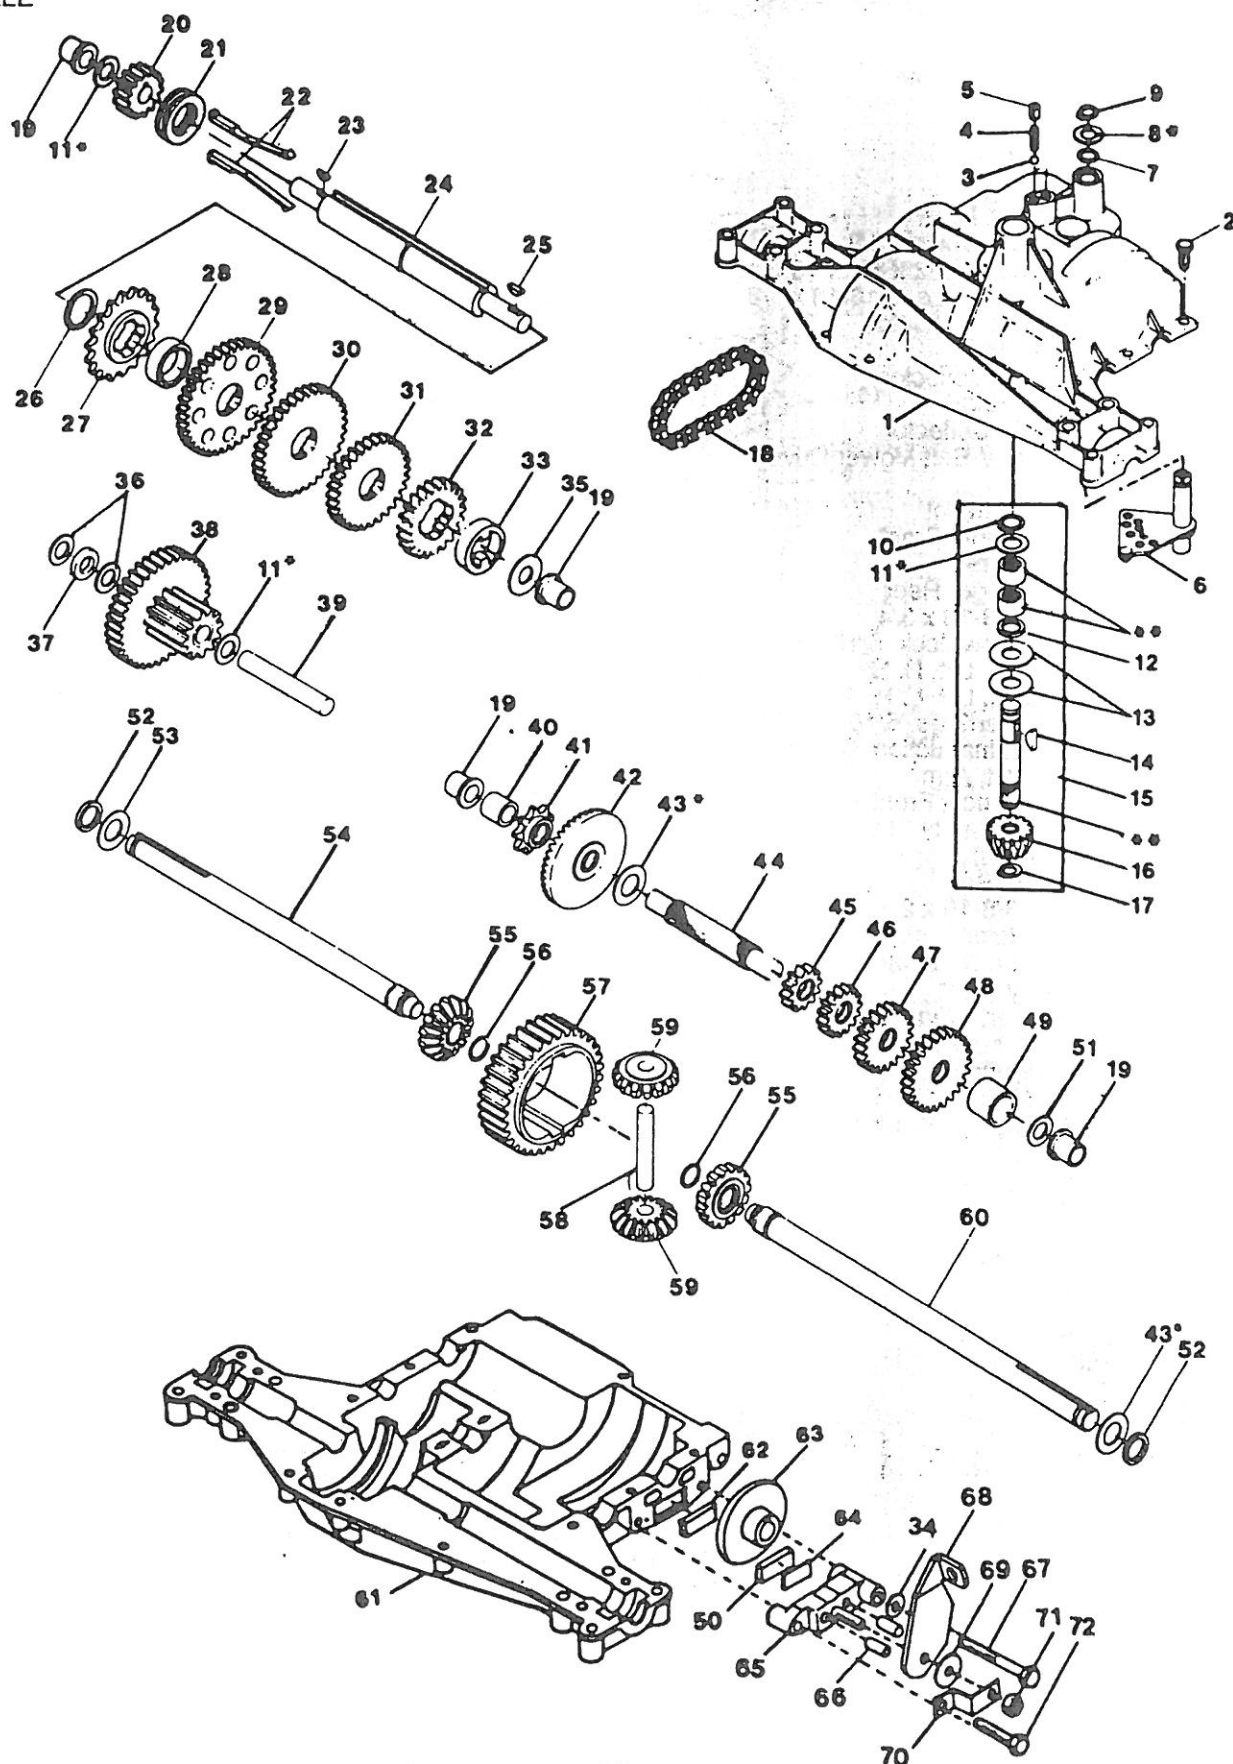

REPAIR PARTS

LAWN TRACTOR TRANSAXLE FOOTE-MODEL NUMBER 4360-5

TRANSAXLE

1	120458X	Housing, Upper
2	2274J	Screw, Tapping, 1/4-20 x .734 Lg.
3	68003	Ball, Detent
4	105904X	Spring, Detent
5	105905X	Screw, Set
6	120460X	Ass'y., Shifter
7	120461X	O-Ring
8	120462X	* Washer, Plain, .505 x .942 x .006
8	120463X	* Washer, Plain, .505 x .942 x .010
8	120464X	* Washer, Plain, .505 x .942 x .015
	120465X	* Washer, Plain, .505 x .942 x .020
o	120466X	* Washer, Plain, .505 x .942 x .026
8	83818	* Washer, Plain, .505 x .942 x .030
8	120467X	* Washer, Plain, .505 x .942 x .040
9	2286J	Ring, Retaining
10	2267J	Ring, Retaining
11	3413J	* Washer, Plain, .632 x 1.00 x .010
11	2233J	* Washer, Plain, .632 x 1.00 x .020
11	2232J	* Washer, Plain, .632 x 1.00 x .026
11	2231J	* Washer, Plain, .632 x 1.00 x .031
11	2230J	* Washer, Plain, .632 x 1.00 x .036
11	2229J	* Washer, Plain, .632 x 1.00 x .041
11	2228J	* Washer, Plain, .632 x 1.00 x .046
11	2227J	* Washer, Plain, .632 x 1.00 x .050
1	2226J	* Washer, Plain, .632 x 1.00 x .060
1	105906X	* Washer, Plain, .632 x 1.00 x .082
12	6725J	O-Ring
13	120415X	Washer, Plain, .632 x 1.38 x .046
14	2257J	Key, Woodruff, #9
15	110077X	Ass'y., Kit, Input Shaft
16	110078X	Pinion, Bevel, 14T
17	105909X	Ring, Retaining
18	105910X	Chain, 24 Pitches
	105911X	Bearing, Flange
20	108976X	Gear, Spur, 14T
21	105913X	Collar, Clutch
22	120468X	Key, Clutch
23	2242J	Key, Woodruff, #3
24	120469X	Shaft, Intermediate
25	2244J	Key, Woodruff, #61
26	105916X	Ring, Retaining
27	120470X	Sprocket, 18T
28	110070X	Spacer
29	108977X	Gear, Spur, 37T
30	120405X	Gear, Spur, 30T
31	108980X	Gear, Spur, 25T
32	108455X	Gear, Spur, 19T
33	108455X	Spacer, 1.133 x 1.50 x .750
34	120993X	Washer, Plain, .343 x .81 x .059
35	105925X	Washer, Plain, .640 x 1.37 x .061
36	2232J	Washer, Plain, .632 x 1.00 x .026
37	108978X	Spacer, .630 x 1.00 x .169
38	110079X	Ass'y., Gear, Comb., 12T & 35T
39	120471X	Shaft, Idler
40	120472X	Spacer, .635 x .875 x .755
41	105928X	Sprocket, 9T

42	110084X	Gear, Bevel, 42T
43	108983X	* Washer, Plain, .758 x 1.12 x .010
43	105930X	* Washer, Plain, .758 x 1.12 x .015
43	105931X	* Washer, Plain, .758 x 1.12 x .020
43	105932X	* Washer, Plain, .758 x 1.12 x .025
43	3417J	* Washer, Plain, .758 x 1.25 x .020
43	106097X	* Washer, Plain, .758 x 1.25 x .025
43	2264J	* Washer, Plain, .758 x 1.25 x .031
43	106098X	* Washer, Plain, .758 x 1.25 x .035
43	2265J	* Washer, Plain, .758 x 1.25 x .040
43	106586X	* Washer, Plain, .758 x 1.25 x .045
43	106587X	* Washer, Plain, .758 x 1.25 x .050
43	106588X	* Washer, Plain, .758 x 1.25 x .055
43	2263J	* Washer, Plain, .758 x 1.25 x .062
44	120473X	Shaft, Drive
45	105933X	Gear, Spur, 12T
46	120407X	Gear, Spur, 20T
47	106589X	Gear, Spur, 25T
48	105937X	Gear, Spur, 31T
49	120523X	Spacer, .781 x 1.00 x .750
50	120951X	Puck, Friction
51	2226J	Washer, Plain, .632 x 1.00 x .060
52	2272J	Seal, Felt
53	2263J	Washer, Plain, .758 x 1.25 x .062
54	120474X	Axle, L.H.
55	110081X	Gear, Miter, 15T
56	105941X	Ring, Retaining
57	110071X	Gear, Spur, 32T
58	120952X	Shaft, Cross
59	110082X	Gear, Miter, 15T
60	120475X	Axle, R.H.
61	120476X	Housing, Lower
62	120961X	Puck, Friction
63	7294J	Disc, Brake
64	108989X	Spacer
65	120953X	Jaw, Brake
66	120954X	Pin, Dowel
67	120955X	Screw, Tapping, 5/16-18 x 2.25
68	108992X	Lever, Actuating
69	108996X	Washer, Plain, .321 x 1.00 x .055
70	120956X	Bracket, Anti-Rotation
71	73810500	Nut, Lock, 5/16-24
72	106596X	Screw, Tapping, 5/16-18 x 1.44 Lg.
73	120416X	Grease

*Use in various combinations to maintain proper clearances.

**Order Key No. 15.


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

LAWN TRACTOR

10 H.P. ENGINE BRIGGS & STRATTON -- MODEL NUMBER 255707, TYPE NUMBER 0122-01

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND WARRANTY SERVICE PERFORMED BY, YOUR LOCAL BRIGGS AND STRATTON DEALER.

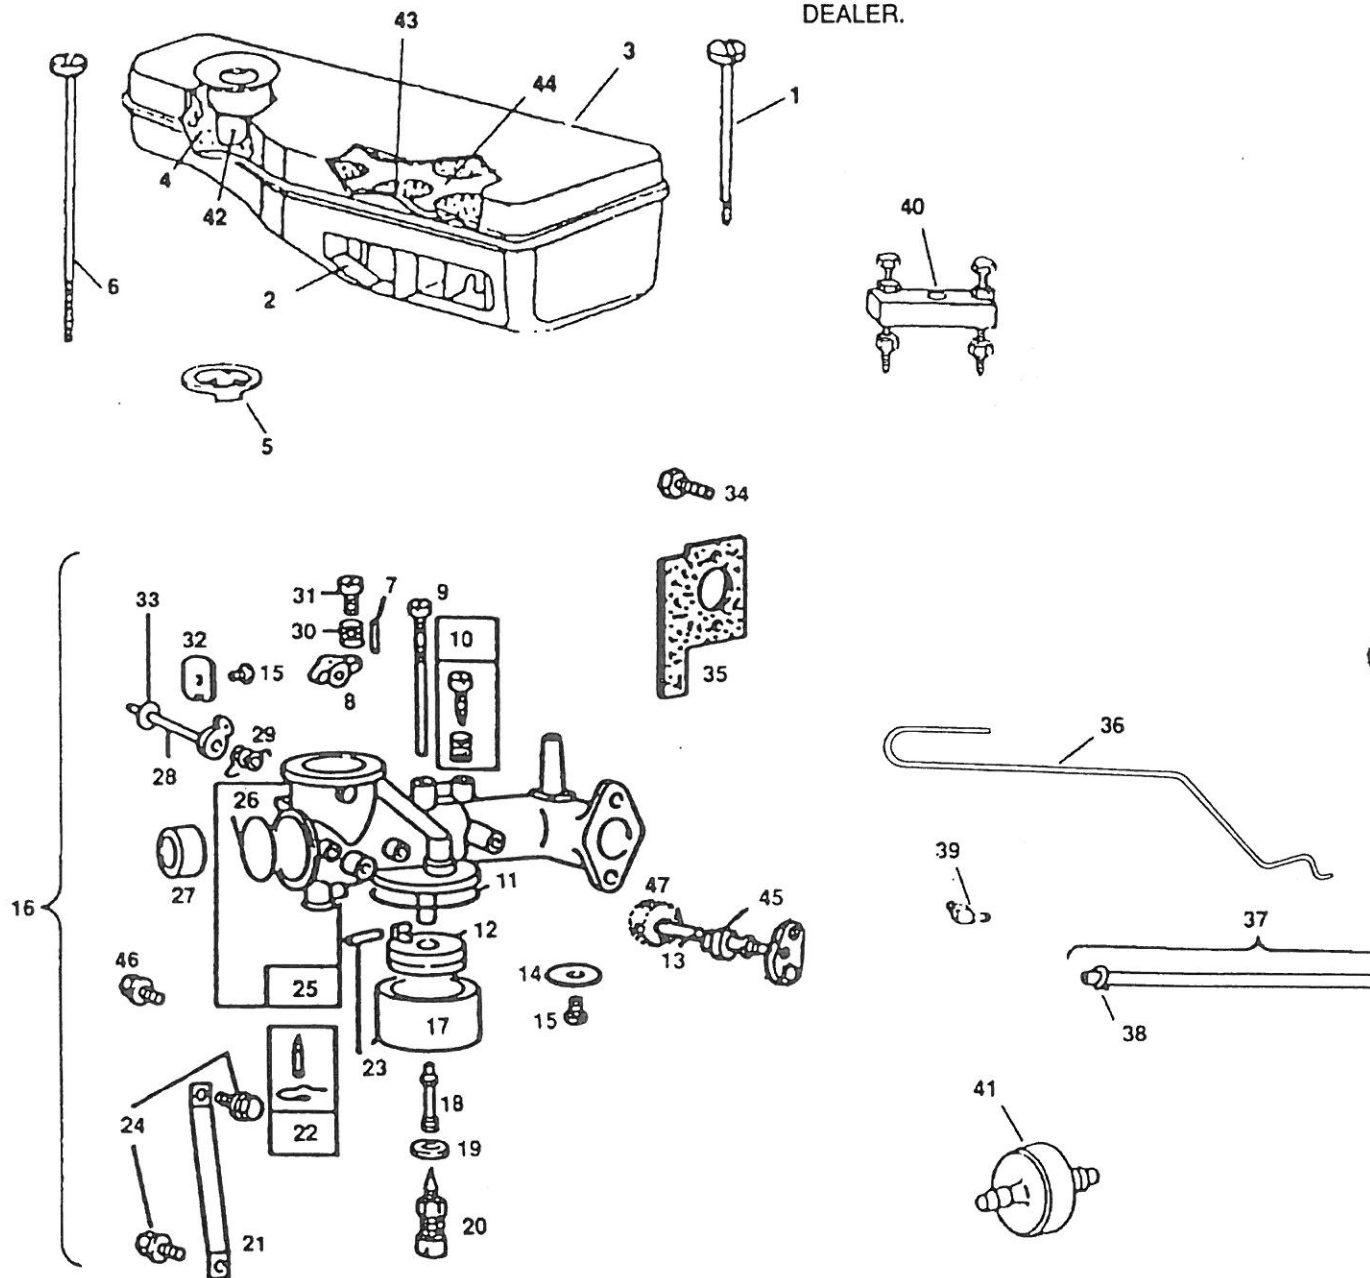

REPAIR PARTS

LAWN TRACTOR

10 H.P. ENGINE BRIGGS & STRATTON -- MODEL NUMBER 255707, TYPE NUMBER 0122-01

KEY PART NO. NO.	DESCRIPTION
1 93323	Screw - Air Cleaner
2 280118	Support - Air Cleaner Element
3 391786	Cleaner Assembly - Air (Inc. No's. 2,4,42,43,44)
4 270843	Element - Air Cleaner
5 270853	Gasket - Air Cleaner
6 93622	Screw - Air Cleaner
7 93043	Pin - Throttle Stop
8 211712	Stop - Throttle
9 299740	† Nozzle - Carburetor
10 292681	† Valve Assembly - Carburetor Idle
11 270511	† Gasket - Float Bowl
12 299707	Float - Carburetor
13 491006	Shaft & Lever - Throttle
14 222433	Valve - Throttle
15 93499	Screw - Throttle & Choke Valve Mtg. Sem
16 491562	Carburetor Assembly (Choke-A-Matic) (Inc. No's. 7 thru 33)
17 221995	Bowl - Float
18 231323	† Screw - Nozzle
19 222014	† Washer - Float Bowl
20 396568	† Valve - Needle
21 222311	Bracket - Carburetor
22 394681	† Valve - Fuel Inlet
23 230896	† Pin - Float Hinge

KEY PART NO. NO.	DESCRIPTION
24 93572	Screw
25 391787	Body Assembly - Carburetor (Inc. No. 26)
26 221997	† Plug - Welch
27 213115	Venturi - Carburetor
28 390684	Shaft & Lever - Choke
29 261116	Spring - Choke Return
30 26157	Spring - Throttle Adjustment
31 91920	Screw - Machine, Fill. Hd. 8-32 x 5/8"
32 222010	Valve Choke
33 270382	Washer- Choke Shaft
34 93357	Screw - Carburetor Mtg.
35 270872	* Gasket - Carburetor Mtg.
36 261610	Link - Choke
37 393815	Line - Fuel (Inc. No. 38)(Cut to suit)
38 93053	Clamp- Fuel Pipe
39 67218	Connector- Fuel Pipe
40 19203	Puller - Flywheel
41 298090	Filter- Fuel(in FuelLine)
42 222380	Cup - Air Cleaner support
43 222495	Spacer - Air Cleaner
44 222382	Screen - Air Cleaner
45 398970	Seal - Throttle Shaft
46 93543	Screw - Control casing to screw
47 271853	Washer- Foam

†INCLUDED IN CARBURETOR OVERHAUL KIT - PART NO. 394698.

*INCLUDED IN GASKET SET - PART NO. 393411.


NOTE: All component dimensions given in U.S. inches--
1 inch = 25.4 mm

REPAIR PARTS

LAWN TRACTOR

10 H.P. ENGINE BRIGGS & STRATTON -- MODEL NUMBER 255707, TYPE NUMBER 0122-01

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

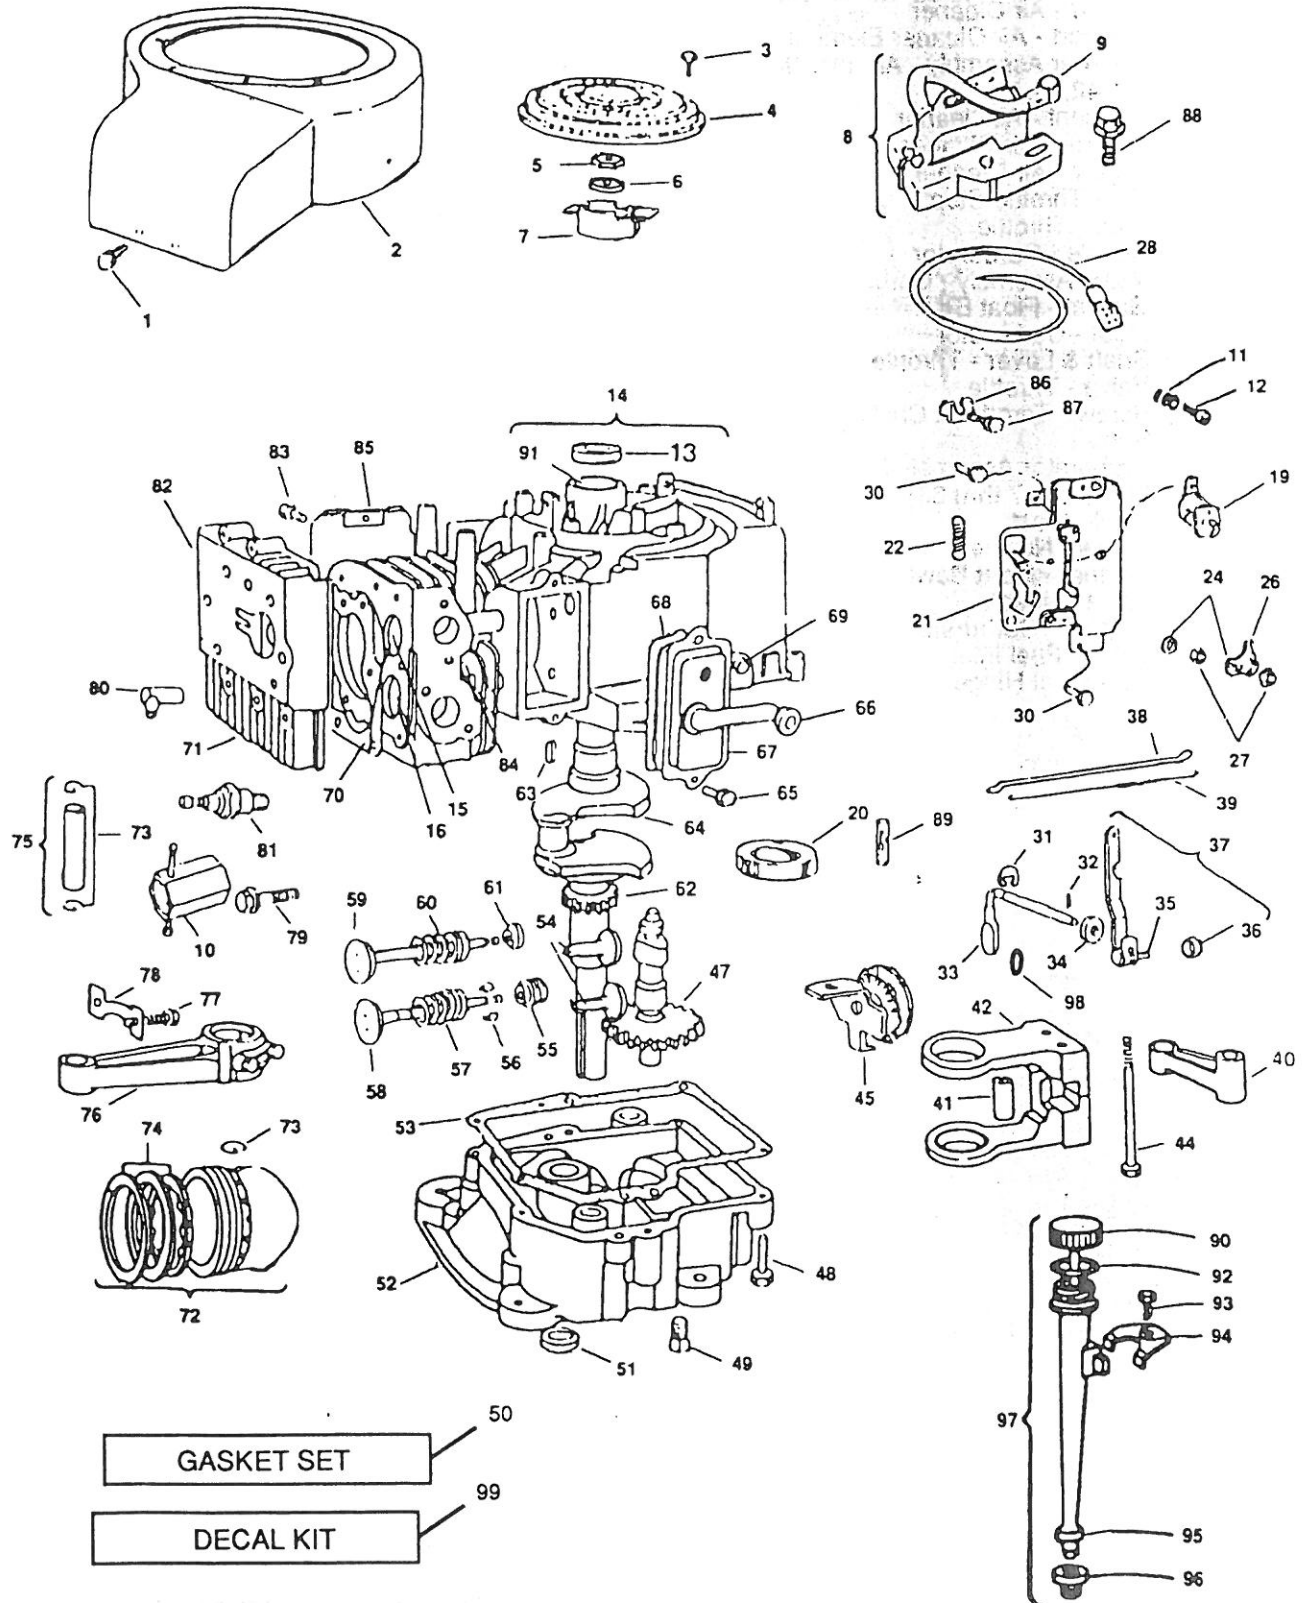

REPAIR PARTS

LAWN TRACTOR

10 H.P. ENGINE BRIGGS & STRATTON -- MODEL NUMBER 255707, TYPE NUMBER 0122-01

KEY PART NO.	NO.	DESCRIPTION
1	93158	Screw - Blower Housing Mounting Sem
2	398333	Housing - Blower
3	93805	Screw - Sem
4	222562	Screen - Flush Rotating
5	92284	Nut - Hex
6	224061	Washer - Spring
7	222561	Cup - Screen Mounting
8	398811	Armature - Magneto
9	221798	Terminal - Ignition Cable
10	89838	Wrench - Spark Plug
11	26157	Spring - Throttle Adjustment
12	90200	Screw - Machine. Fil. Hd. 8-32 x 1/2
13	391086	Seal - Oil
	396324	Cylinder Assembly
	261463	† Seat - Intake Valve (Std.)
16	210940	† Seat - Exhaust Valve (Std.)
19	398525	Insulator Assembly
20	261242	Eccentric
21	491594	Plate - Gov. Control
22	260695	Spring - Governor
24	92791	Washer - Lock - Shakeproof
26	93722	Terminal - Spade
27	90576	Nut - Hex 8-32
28	398808	Wire - Ground
30	93572	Screw - Control Bracket Mtg. (3/8")
31	93307	Retainer - E-Ring
32	93306	Cotter - Hair Pin
33	231058	Crank - Governor (1/4" Dia.)
34	222450	Washer - Gov. Crank (1/4" I.D.)
	92613	Bolt - Governor Lever
36	231082	Nut - Hex 10-24
37	490927	Lever Assembly - Governor (for 1/4" Dia. Crank) (Inc. No's. 35 & 36)
38	262348	Link - Governor
39	260584	Spring - Governor Link
40	212359	Link - Counterweight
41	298909	Pin - Counterweight (1)
42	391373	Counterweight Assembly (Inc. No. 41)
	93875	Screw - Counterweight (1)
	490815	Oil Slinger, Gov. Gear & Bracket Assembly
47	212897	Gear - Cam
48	93585	Screw - Base Mounting Sem
49	91084	Plug - Oil Drain
50	393411	Gasket Set
51	291675	Seal - Oil
52	391784	Base - Engine (Inc. No.'s 51 & 53)
53	270808	* Gasket - Crankcase Cover - 1/64" Thick
	270915	* Gasket - Crankcase Cover - .005" Thick
	270916	* Gasket - Crankcase Cover - .009" Thick
54	262248	Tappet - Valve
55	292260	Rotocoil - Exhaust Valve
56	93630	Retainer - Exhaust Valve Rotocoil(2)
57	26828	Spring - Exhaust Valve
58	261185	Valve - Exhaust
59	261462	Valve - Intake
60	65906	Spring - Intake Valve
61	221596	Retainer - Intake Valve

KEY PART NO.	NO.	DESCRIPTION
62	262135	Gear - Timing
63	222698	Key - Flywheel
64	491647	Crankshaft, Note: For Timing Gear Retaining Device order part No. 94196
65	93394	Screw - Sem
66	280100	Tube - Breather
67	391406	Breather Assembly
68	27803	* Gasket - Valve Cover
69	231055	Bushing - Gov. Crank (1/4" I.D.)
70	271866	* Gasket - Cylinder Head
71	212914	Head - Cylinder
72	391285	Piston Assembly - Standard (Inc. No's. 73 & 74)
	391287	Piston Assembly - .010" O.S.
	391288	Piston Assembly - .020" O.S.
	391289	Piston Assembly - .030" O.S.
73	260924	Lock - Piston Pin
74	391780	Ring Set - Piston - Std.
	391781	Ring Set - Piston - .010" O.S.
	391782	Ring Set - Piston - .020" O.S.
	391783	Ring Set - Piston - .030" O.S.
75	299691	Pin Assembly - Piston - Std. (Inc. No. 73)
	391286	Pin Assembly - Piston - .005" O.S.
76	490348	Rod Assembly - Connecting (Inc. 77 & 78) Note: For Connecting Rod with .020" Undersize Crankpin Bore, Order Part No. 490469
77	92909	Screw - Connecting Rod
78	222299	Lock - Connecting Rod Screw
79	93723	Screw - Cylinder Head (3" long)
80	66538	Elbow - Spark Plug
81	298809	Plug - Spark
82	222725	Cover - Cylinder Head
83	93163	Screw - Cylinder Shield Mtg. Sem
84	231218	† Guide - Exhaust or Intake Valve (Brass) See Repair Manual
85	222744	Shield - Cylinder
86	221535	Clamp - Casing
87	93496	Screw - Sem
88	93381	Screw - Armature Mounting Sem
89	94160	Pin - Eccentric
90	391841	Cap and Dipstick - Oil Filler
91	399265	† Bushing - Cylinder
92	270920	Seal, Oil Filler Cap
93	93804	Screw - Clamp Mtg.
94	223394	Clamp - Oil Filler Tube
95	280134	Tube - Oil Filler
96	68838	Seal - Filler Tube
97	392067	Fill Group - Oil (Inc. Key No's. 90, 92, 93, 94, 95, 96)
98	491323	Seal Oil
99	491194	Decal Kit

*INCLUDED IN GASKET SET - NO. 393411

†SPECIAL TOOLS REQUIRED TO INSTALL.


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

LAWN TRACTOR

10 H.P. ENGINE BRIGGS & STRATTON -- MODEL NUMBER 255707, TYPE NUMBER 0122-01

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

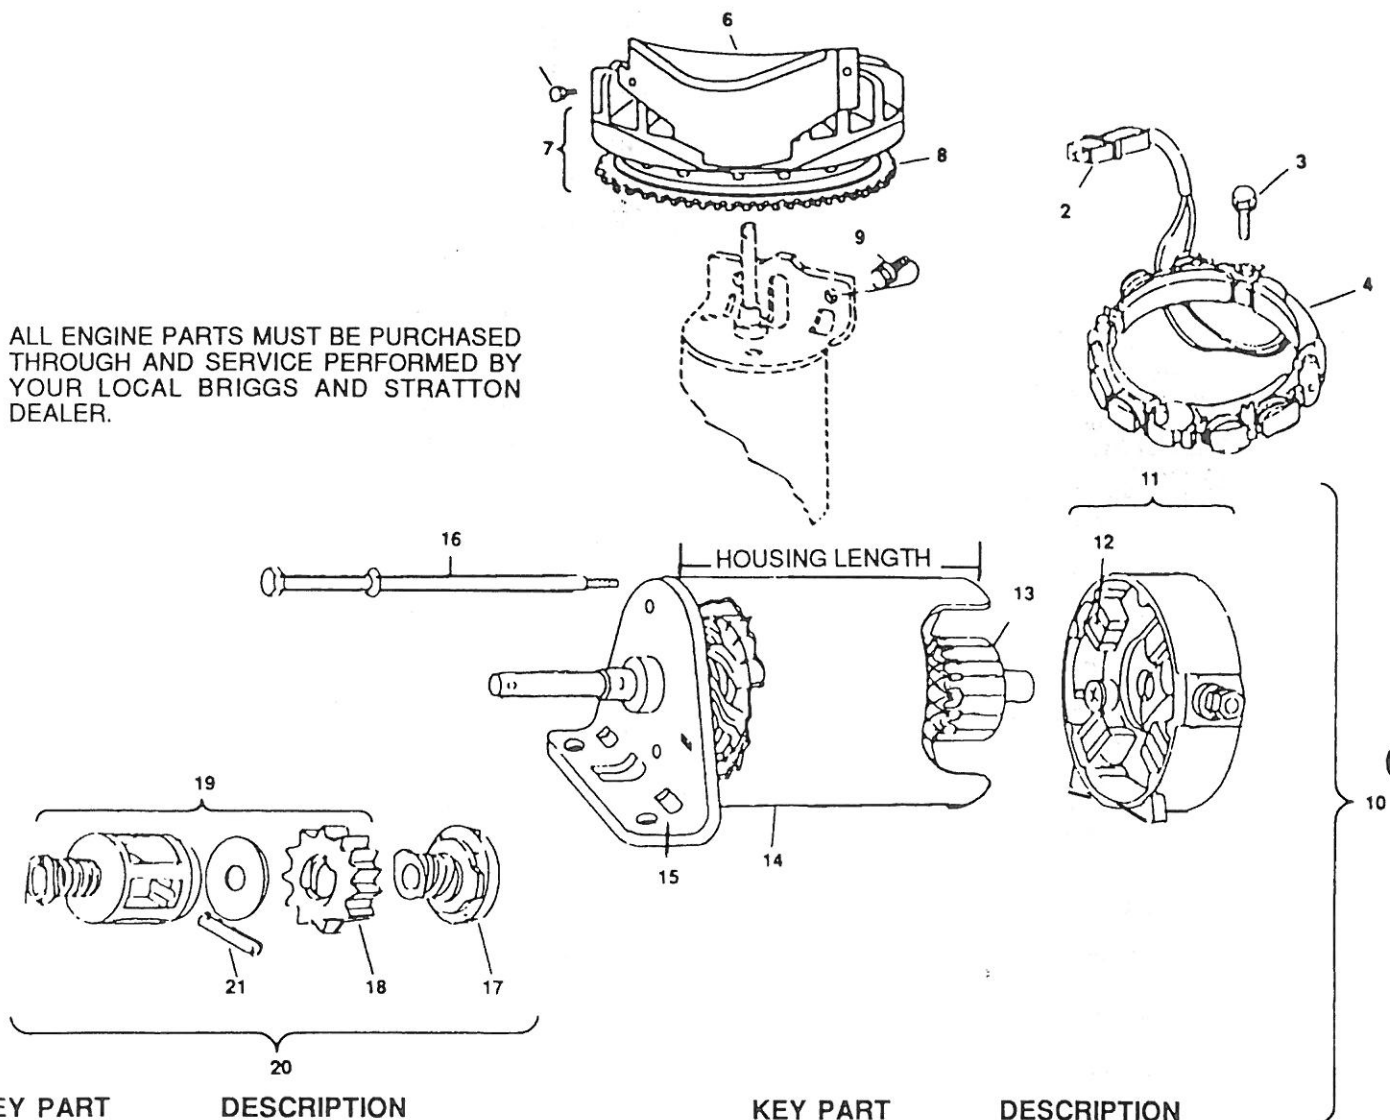

KEY PART NO.	NO.	DESCRIPTION
2	393456	Diode and Conn. Assembly
3	93621	Screw - Sem
4	393474	Stator - Alternator
5	93984	Screw - Hex Head
6	395405	Cover - Starter (Inc. Mtg. Screws)
7	391988	Flywheel & Ring Gear Assembly
8	392134	Magneto (Inc. No. 8)
9	93523	Gear - Ring (Inc. Mounting Parts)
10	394805	Screw - Sem
		Motor and Drive Assembly (12 Volt)
		(Inc. No's. 11 thru 21)

KEY PART NO.	NO.	DESCRIPTION
11	395537	End Cap Assembly Commutator (Inc. No. 12)
12	395538	Brush Assembly
13	390837	Armature Assembly
14	393825	Housing Assembly
15	394856	Drive End Cap Assembly
16	94003	Thru Bolt Assembly
17	398003	Clutch Assembly
18	280104	Gear
19	393254	Retainer and Pin
20	396865	Drive Assembly (Inc. No's. 17, 18, 19 & 21)
21	94192	Roll Pin

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.